


OPERATING INSTRUCTIONS

Personal Computer

Model No. **UT-MA6** series

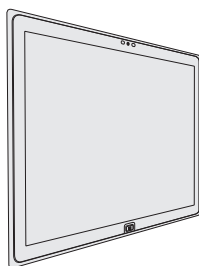

Contents

Getting Started

Introduction.....	2
Description of Parts	4
First-time Operation.....	6
Turning On / Turning Off.....	9

Useful Information

Handling and Maintenance.....	10
Reinstalling Software.....	15

Troubleshooting

Troubleshooting (Basic).....	20
------------------------------	----

Appendix

LIMITED USE LICENSE AGREEMENT	25
Specifications	27
Standard Limited Warranty	30

Getting Started

Useful Information

Troubleshooting




Appendix

Please print and use pages
containing important descriptions
for software installation, etc.

Introduction

Thank you for purchasing this Panasonic product. For optimum performance and safety, please read these instructions carefully.

■ Terms and illustrations in these instructions

CAUTION :	Conditions that may result in minor or moderate injury.
NOTE :	Useful and helpful information.
→ :	Page in these Operating Instructions or in the Reference Manual.
 :	Reference to the on-screen manuals.
Open the charms :	Swipe in from the right edge of the screen.
Touch  :	Touch  (Settings) in the charms.
<Only if the external keyboard is connected>	
F12 :	Press F12 key.

- Some illustrations are simplified to help your understanding and may look different from the actual unit.
- If you do not sign in as an administrator, you cannot use some functions or cannot display some screens.
- Refer for the latest information about optional products to the catalogs, etc.
- In these instructions, the names and terms are referred as follows.
 - “Windows® 8.1 Pro Update 64-bit” as “Windows” or “Windows 8.1”
 - DVD MULTI drive as “DVD drive”
- Screen messages are explained in [English (United States)].
(Depending on the language preference, some screen messages in these instructions are different from the actual screen messages. For example, [Flight mode] may be displayed instead of [Airplane mode] in some language preference)


■ Disclaimer

Computer specifications and manuals are subject to change without notice. Panasonic Corporation assumes no liability for damage incurred directly or indirectly from errors, omissions or discrepancies between the computer and the manuals.

■ Trademarks

Microsoft®, Windows®, and the Windows logo are registered trademarks of Microsoft Corporation of the United States and/or other countries.

Intel, Core, Centrino and PROSet are either registered trademarks or trademarks of Intel Corporation.

SDXC Logo is a trademark of SD-3C, LLC. 

Bluetooth® is a registered trademark owned by Bluetooth SIG, Inc., U.S.A. and licensed to Panasonic Corporation.

NVIDIA, the NVIDIA logo and QUADRO are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and/or other countries.

DisplayPort is a trademark owned by the Video Electronics Standards Association in the United States and other countries.

Names of products, brands, etc., appearing in this manual are trademarks or registered trademarks of their respective own companies.

■ On-screen Manual

For further information about the computer, you can refer to the on-screen manual.

● Reference Manual

The Reference Manual contains the practical information to help you fully enjoy the computer's performance.

● Important Battery Tips


The Important Battery Tips will provide you with the battery information so that you can use the built-in battery in the optimum condition to obtain longer operation time.

To access the on-screen manuals, follow the steps below.

On the Start screen, touch the [Manual Selector] tile, and select the on-screen manual.

Description of Parts

Front side

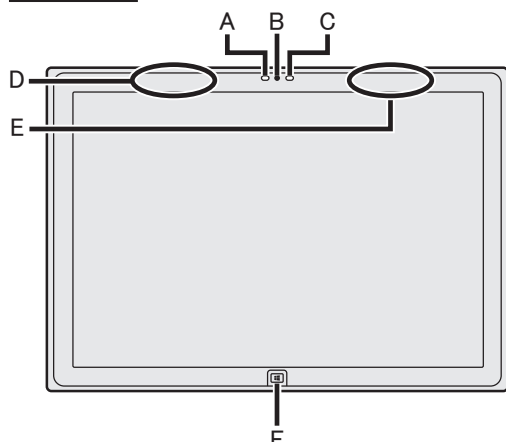

Left side



Camera

→ *Reference Manual* "Camera"

A: Camera Indicator

B: Camera Lens

C: Ambient Light Sensor

The ambient light sensor is equipped with an automatic brightness adjustment function that adjusts the display screen.
(→ page 11)

D: Wireless LAN Antenna / Bluetooth Antenna

<Only for model with wireless LAN>

<Only for model with Bluetooth>

→ *Reference Manual* "Wireless LAN"
"Bluetooth"

E: Wireless LAN Antenna

<Only for model with wireless LAN>

→ *Reference Manual* "Wireless LAN"

F: Windows Button

→ *Reference Manual* "Hardware Buttons"

G: Power Switch

H: Hardware Buttons

→ *Reference Manual* "Hardware Buttons"

I: LED Indicator

: Power Indicator
Off: Power off/Hibernation
Green: Power on
Blinking green: Sleep

: Drive status

: SD Memory Card status
(Blinking: During access or a password is requested)

→ *Reference Manual* "SD Memory Card"

: Battery status

→ page 10 "When the battery indicator does not light on"


→ *Reference Manual* "Battery Power"

J: Security Hook

Pull out the security hook when passing through a security cable. Store the security hook during normal use.

(The insulation coating has been applied to the metal part.)


For further information, read the manual that comes with the cable.

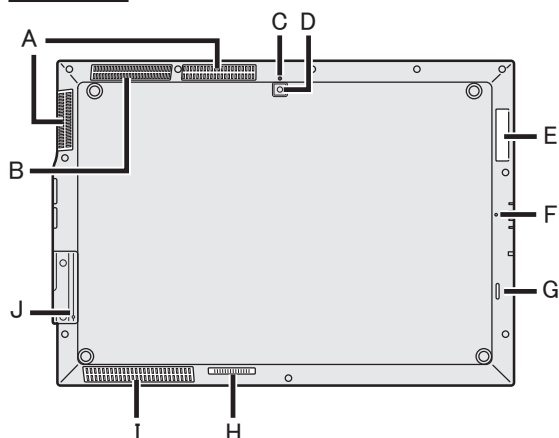Rear side**A: Ventilation Hole (Exhaust)****B: Ventilation Hole (Intake)****Rear Camera**

<Only for model with Rear Camera>

→ *Reference Manual* "Camera"**C: Camera Indicator****D: Camera Lens****E: Smart Card Slot**

<Only for model with Smart Card Slot>

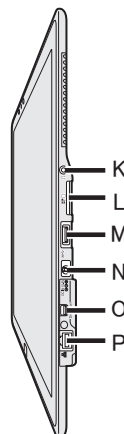→ *Reference Manual* "Smart Card"**F: Microphone****G: Speaker****H: Expansion Bus Connector**→ *Reference Manual* "Cradle"**I: Ventilation Hole (Intake) / Speaker****J: Reset Button (For servicing by Panasonic)****Right side****K: Headphone Jack**

A headphone can be connected.


L: SD Memory Card Slot

<Only for model with SD memory card slot>

→ *Reference Manual* "SD Memory Card"**M: USB3.0 Port**→ *Reference Manual* "USB Devices"**N: DC-IN jack****O: Mini DisplayPort**→ *Reference Manual* "External Display"**P: LAN port**→ *Reference Manual* "LAN"

This computer contains a magnet and magnetic products at the locations circled in the illustration at right.

Avoid leaving metallic object or magnetic media in contact with these areas.

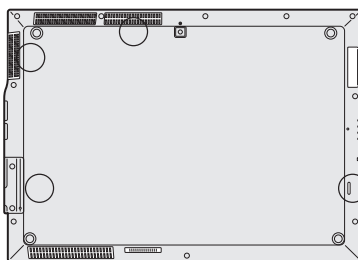


First-time Operation

■ Preparation

① Check and identify the supplied accessories.

If you do not find the described accessories, contact Panasonic Technical Support.

• **AC Adaptor** . . . 1 • **AC Cord** 1 • **Soft Cloth** . . . 1



Model No:
CF-AA5713A

→  *Reference Manual*
"Screen Input Operation"

- **Operating Instructions (CD-ROM / -R)** 1
- **Safety Precautions and Regulatory Information** 1
- **Before using this computer** 1


② Read the LIMITED USE LICENSE AGREEMENT before breaking the seal on the computer's packaging (→ page 25).

1 Connect your computer to a power outlet

The battery charging starts automatically.

CAUTION

- Do not disconnect the AC adaptor until the first-time operation procedure is completed.
- When using the computer for the first time, do not connect any peripheral device except AC adaptor.
- **Handling the AC adaptor**
 - Problems such as sudden voltage drops may arise during periods of thunder and lightning. Since this could adversely affect your computer, an uninterruptible power source (UPS) is highly recommended unless running from the built-in battery alone.

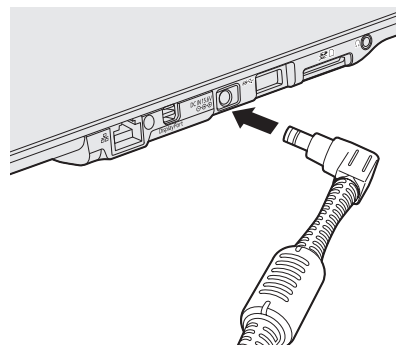

2 Turn on the computer

Press and hold the power switch  until the power indicator  lights (→ page 4).

CAUTION


- Do not press the power switch repeatedly or do not hold the power switch for four seconds or longer.
- Any changes from the default setting of the Setup Utility must not be made until the First-time Operation is completed.

3 Select language

Select language and touch [Next].
Follow the on-screen instructions.

4 Setup Windows

Follow the on-screen instructions.


- The computer restarts several times. Wait until the drive indicator  has turned off.
- After the computer is turned on, the screen remains black or unchanged for a while, but this is not a malfunction. Wait for a moment until the Windows setup screen appears.
- Setup of Windows will take approximately 5 minutes.
Go to the next step, confirming each message on the display.
- If "Get online" is displayed, select [Skip this step].
You can set the Wireless Network after the setup of Windows is complete.

CAUTION

- You can change the user name, password, image and security setting after setup of Windows.
- Remember your password. If you forget the password, you cannot use Windows. Creating a password reset disk beforehand is recommended.
- Do not use the following words for user name: CON, PRN, AUX, CLOCK\$, NUL, COM1 to COM9, LPT1 to LPT9, @, &, space. In particular, if you create a user name (account name) that includes the "@" mark, a password will be requested at the sign-in screen, even if no password has been set. If you try to sign in without entering a password, "The user name or password is incorrect." may be displayed and you will not be able to sign in (→ page 22).

5 Create the recovery disc

A recovery disc allows you to install OS and restore its factory default condition, in case, for example, the recovery partition of the flash memory is damaged. We recommend creating a recovery disc before you begin using the computer.


Refer to →  *Reference Manual* "Recovery Disc Creation Utility" about creating the disc.

NOTE

● PC Information Viewer

This computer periodically records the management information of the flash memory, etc. The maximum data volume for each record is 1024 bytes.

This information is only used for estimating the cause when the flash memory goes down by any possibility. They are never sent to outside via network nor used for any other purpose except for the purpose described the above.

To disable the function, add the check mark for [Disable the automatic save function for management information history] in [Hard Disk Status] of PC Information Viewer, and touch [OK]. (→  *Reference Manual* "Troubleshooting (Advanced)" - "Checking the Computer's Usage Status")

- In the default settings, a shortcut icon for Korean language is on the desktop screen. You may delete the icon if not necessary.

■ Battery duration

Note that the computer consumes electricity even when the computer power is off. If the built-in battery is fully charged, the battery will fully discharge in the following period of time:


Status	Discharge period
In sleep	Approx. 4 days (Approx. 3 days with Wake Up from wired LAN function activated)
In hibernation	Approx. 49 days (Approx. 7 days with Wake Up from wired LAN function activated)
When power is off	Approx. 49 days (Approx. 7 days with Power On by LAN function activated)

The above table shows the battery duration while the USB port continuous charging function is not used.

The battery duration will slightly be longer if a LAN cable is not connected to the computer, even when Wake Up from wired LAN function is activated.


First-time Operation

■ Before using wireless function

- ① Open the charms, and touch  - [Change PC settings] - [Network] - [Airplane mode*¹].
 - ② Set "Airplane mode*¹" to [Off], and then;
set "Wi-Fi" to [On] (for wireless LAN).
set "Bluetooth" to [On] (for Bluetooth).
- *¹ : Screen messages are explained in [English (United States)].
(Depending on the language preference, some screen messages in these instructions are different from the actual screen messages. For example, [Flight mode] may be displayed instead of [Airplane mode] in some language preference.)

■ To change the partition structure

You can shrink a part of an existing partition to create unallocated disk space, from which you can create a new partition. In the default setting, you can use a single partition.


- ① Perform the following procedure.
 - Long touch  at the bottom left corner of the desktop screen.
- ② Touch [Disk Management].
- ③ Long touch the partition for Windows ("c" drive in the default setting), and touch [Shrink Volume...].
 - The partition size depends on the computer specifications.
- ④ Input the size in "Enter the amount of space to shrink in MB" and touch [Shrink].
 - You cannot input a larger number than the displayed size.
 - To select [Reinstall to the OS related partitions.] in installing OS (➔ page 17), 70 GB or more is necessary for "Total size after shrink in MB".
- ⑤ Long touch [Unallocated] (the shrunk space in the step ④) and touch [New Simple Volume...].
- ⑥ Follow the on-screen instructions to make the settings, and touch [Finish].
Wait until formatting is completed.

NOTE

- You can create an additional partition using remaining unallocated space or newly creating unallocated space.
- To delete a partition, long touch the partition and touch [Delete Volume...] in the step ③.


■ To select language

To select a language other than the one you have selected during the first-time operation, follow the steps below.


- ① Perform either of the following procedures.
 - Long touch  at the bottom left corner of the desktop screen.
 - Slide up from the middle of the Start screen with a finger.
- ② Touch [Control Panel].
- ③ Touch [Clock, Language, and Region] - [Language] - [Add a language].
- ④ Select a language, and then touch [Add].
Depending on the region, two or more languages are selectable. Touch [Open] and select the desired language, and then touch [Add].
- ⑤ Touch [Options] for the language you want to use.
- ⑥ Touch [Make this the primary language].
- ⑦ Touch [Log off now].
- ⑧ Sign in to Windows.

Turning On / Turning Off


Turning On

Press and hold the power switch  until the power indicator  lights (→ page 4).


NOTE

- Do not press the power switch repeatedly.
- The computer will forcibly be turned off if you press and hold the power switch for four seconds or longer.
- Once you turn off the computer, wait for ten seconds or more before you turn on the computer again.
- Do not perform the following operation until the drive indicator  turns off.
 - Connecting or disconnecting the AC adaptor
 - Pressing the power switch
 - Touching the screen or external mouse/keyboard

Turning Off

- ① Shut down the computer.
 1. Open the charms, and touch .
 2. Touch [Power] - [Shut down].


NOTE

- To turn off the computer completely, proceed as follows.
 - ① Open the charms, and touch  - [Change PC settings] - [Update and recovery] - [Recovery].
 - ② Touch [Restart now] under "Advanced startup".
 - ③ Touch [Turn off your PC].

Precaution against Starting Up/Shutting Down

- Do not do the following
 - Connecting or disconnecting the AC adaptor
 - Pressing the power switch
 - Touching the screen or external mouse/keyboard

NOTE

- To conserve power, the following power saving methods are set at the time of purchase.
 - The screen automatically turns off after:
 - 10 minutes (when AC adaptor is connected) of inactivity
 - 5 minutes (when operating on battery power) of inactivity
 - The computer automatically enters sleep^{*1} after:
 - 20 minutes (when AC adaptor is connected) of inactivity
 - 15 minutes (when operating on battery power) of inactivity
- ^{*1} Refer to  *Reference Manual* "Sleep or Hibernation Functions" about resuming from sleep.


Handling and Maintenance

Operation environment

- Place the computer on a flat stable surface not subject to shock, vibration, and danger of dropping. Do not place the computer upright or turn it over. If the computer is exposed to an extremely strong impact, it may become damaged.
- Operating environment
 - Temperature: Operation : 5 °C to 35 °C
Storage : -20 °C to 60 °C
 - Humidity: Operation : 30% to 80% RH (No condensation)
Storage : 30% to 90% RH (No condensation)Even within the above temperature/humidity ranges, operation for a long time in extreme environments, smoking nearby, or operation in places where oil is used or where there is a lot of dust will result in the product deterioration and will shorten the product life.
- Do not place the computer in the following areas, otherwise the computer may be damaged.
 - Near electronic equipment. Image distortion or noise may occur.
 - In extremely high or low temperature.
- As the computer can become hot during operation, keep it away from items that are sensitive to heat.

Handling cautions

This computer is designed to minimize shock to parts such as the LCD and the flash memory drive, but no warranty is provided against any trouble caused by shock. Be extremely careful when handling the computer.

- When carrying the computer:
 - Turn off the computer.
 - Remove all external devices, cables, Smart Cards and other protruding objects.
 - Do not drop or hit the computer against solid objects.
 - Do not grip the display part.
- When you board an airplane, take the computer with you and never put it in your checked luggage. When using the computer on airplane, follow the airline's instructions.
 - To use airplane mode^{*1}:
 - ① Open the charms, and touch  - [Change PC settings] - [Network] - [Airplane mode^{*1}].
 - ② Set "Airplane mode^{*1}" to [On].
 - ③ Confirm that all wireless devices are set to [Off].
- ^{*1} : Screen messages are explained in [English (United States)].
(Depending on the language preference, some screen messages in these instructions are different from the actual screen messages. For example, [Flight mode] may be displayed instead of [Airplane mode] in some language preference.)
- Use only your fingers or the dedicated electronic touch pen (optional) to touch the screen. Do not place any object on its surface and do not press down strongly with sharp-pointed or hard objects that may leave marks (e.g., nails, pencils and ball point pens).
- Avoid any harmful substances such as oil from getting into the touchscreen. The pointer may not work correctly.
- Be careful not to get injured by dropping or getting hit when carrying the computer.

■ When the battery indicator does not light on

The battery indicator may not light on even if the AC adaptor is correctly connected to the computer, due to the following reasons.

- The AC adaptor's protection function may be working. In this case, pull out the AC cord and wait for more than 1 minute before reconnecting the AC cord.

■ When using peripheral devices

Follow these instructions and the Reference Manual to avoid any damage to the devices. Carefully read the instruction manuals of the peripheral devices.

- Use the peripheral devices conforming to the computer's specifications.
- Connect to the connectors in the correct direction.
- If it is hard to insert, do not try forcibly but check the connector's shape, direction, alignment of pins, etc.
- If screws are included, fasten them securely.
- Remove the cables when you carry the computer. Do not pull the cables forcibly.

■ Preventing your computer from unauthorized use via wireless LAN/Bluetooth

<Only for model with wireless LAN/Bluetooth>

- Before using wireless LAN/Bluetooth, make the appropriate security settings such as data encryption.

■ Battery Recalibration

- The battery recalibration may take a long time due to the large battery capacity. This is not a malfunction.

<When performing "Battery Recalibration" after shutting down Windows>

- Full charge: Approximately 2.5 hours
- Complete discharge: Approximately 2 hours

When performing "Battery Recalibration" without shutting down Windows, it may take more time to charge/discharge.

■ Sensors

This computer is equipped with four sensors (acceleration sensor, gyro sensor, magnetic sensor, ambient light sensor), and you can use these sensors with any software that is compatible.


As the accuracy of each sensor output is dependent on the operating environment and other conditions, the results should only be used as a reference.

The acceleration sensor, gyro sensor, and magnetic sensor are located at the bottom left of the LCD.

The detection results of each sensor may vary depending on how you are holding the computer, the application software you are using, and other factors.

● Automatic brightness adjustment

The computer is equipped with an automatic brightness adjustment function that adjusts the display screen based on the ambient light sensor. You can configure the automatic adjustment function as follows.

- ① Open the charms, and touch  - [Change PC settings] - [PC and devices] - [Power and sleep].
- ② Set "Adjust my screen brightness automatically" to [On].

The ambient light sensor is located at the top of LCD.

The ambient light cannot be detected properly if this area is obstructed or dirty.

Handling and Maintenance

● Magnetic sensor

The magnetic sensor on the computer operates by detecting geomagnetism. Therefore, the magnetic sensor may not function properly and its readings may be inaccurate, especially in the following environments.

- Inside or near steel structures such as buildings or bridges
- Inside or near automobiles, or near train power lines
- Near metallic furniture or appliances
- When the AC adaptor or other peripheral devices are brought closer to the computer
- Near magnets, speakers, or other objects with strong magnetic fields

The magnetic directions indicated by the magnetic sensor may not be accurate immediately after purchase or in environments with poor magnetic fields.

In such cases, turn on the computer and move it as follows.

- ① Hold the computer so that its screen side is facing upward and level.
- ② While keeping the computer level, rotate it 90 degrees or more clockwise.
- ③ Return the computer to position ①, and rotate it 90 degrees or more counterclockwise.
- ④ Return the computer to position ①.
- ⑤ Tilt the computer 90 degrees or more to the left so that the left side of the computer tilts down.
- ⑥ Return the computer to position ①, and tilt it 90 degrees or more to the right so that the right side of the computer tilts down.


CAUTION

- Hold the computer firmly when moving it. Strong shocks from dropping the computer may result in damage.

Maintenance

If drops of water or other stains get on the surface of the LCD panel, wipe them off immediately. Failure to do so may result in staining.

To clean the LCD panel

Use the soft cloth included with the computer. (For further information, refer to “Suggestions About Cleaning the LCD Surface” →  *Reference Manual* “Screen Input Operation”.)

To clean areas other than the LCD panel

Wipe with a soft dry cloth such as gauze. When using detergent, dip a soft cloth in water-diluted detergent and wring it thoroughly.

CAUTION

- Do not use benzene, thinner, or rubbing alcohol since it may adversely affect the surface causing discoloration, etc. Do not use commercially-available household cleaners and cosmetics, as they may contain components harmful to the surface.
- Do not apply water or detergent directly to the computer, since liquid may enter inside of the computer and cause malfunction or damage.

Dispose of Computer

<For Europe and U.S.A./Canada>


Attention Customers

Don't remove the battery by yourself. The battery must be removed by qualified professionals. When disposing of this product, be sure to contact qualified professionals to remove the battery.

Attention Qualified professionals to remove the battery



Dispose of this product correctly in accordance with the local regulations after removing the battery as shown in the following procedure.


■ Preparation

- Remove all peripherals (SD memory card, etc.).
- Erase the stored data. (→  *Reference Manual* “Erasing Flash Memory Data”)



CAUTION

- Never disassemble the computer except before disposal.
- Refer to “Safety Precautions and Regulatory Information” for precautions when disposing of the computer.

1. Turn off the computer completely. (→ page 9)
 - Do not use sleep/hibernation.
2. While connecting the AC adaptor, press both volume buttons (+  and  -) at the same time for more than five seconds.
The built-in battery's power output stops.
 - Disconnect the AC adaptor, and press the power button for 1 second or longer and confirm the computer does not start up.
3. Turn over the computer, and peel off the seal (A) on the side of Interface cover with a thin pointed tool.

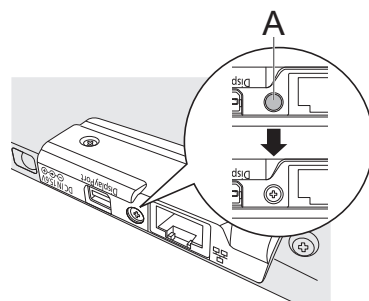


4. Remove the screws (3), and lift up Interface cover to remove.

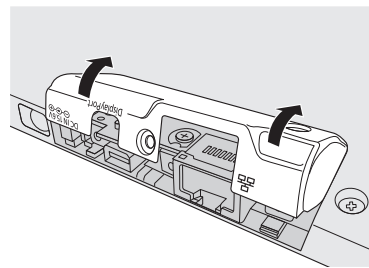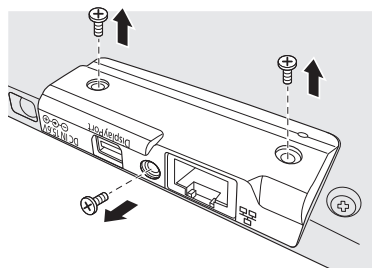


Handling and Maintenance

5. Remove the silver screw.

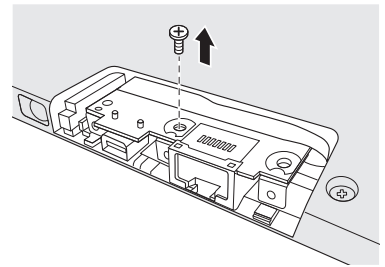


6. Remove the screws (10).

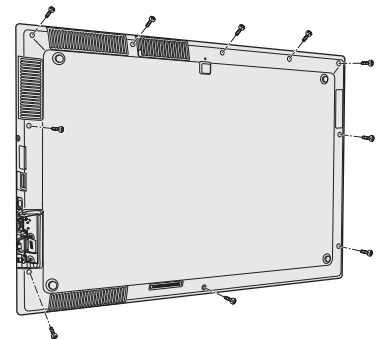


7. Unhook the claws on the upper part of the cover (①), and open the cover from the right side (②).


- The left side of the cover is connected to the computer with the cord. Do not pull the cord.

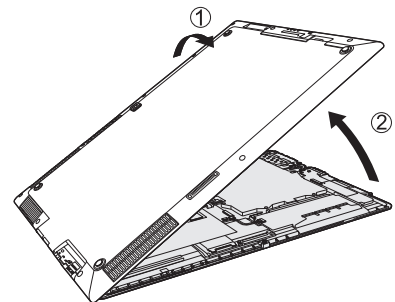

8. Disconnect the connector (B).
Insulate the connectors on the built-in battery by covering them with plastic tape, for example.

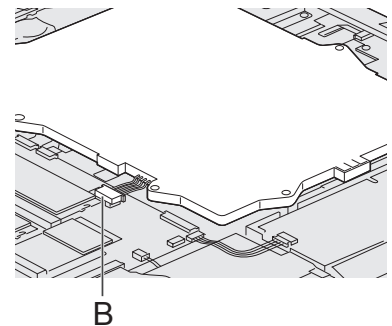

9. Remove the screws (7) that secures the built-in battery (C), and remove the built-in battery.

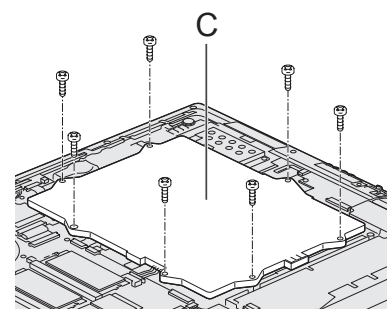


Reinstalling Software





Reinstalling software will return the computer to the default condition. When you reinstall the software, the flash memory data will be erased.

Back up important data to other media or an external hard disk before reinstallation.

CAUTION

- Do not delete the Recovery Partition on the flash memory. The Recovery Partition is not available to store data.
To check the Recovery Partition, perform the following methods.
 - ① Perform the following procedure.
 - Long touch  at the bottom left corner of the desktop screen.
 - ② Touch [Disk Management].

NOTE

- You can use the following buttons instead of the keyboard (→ page 4).
 -  — : ↓ key
 - +  : ↑ key
 -  : Enter key
 -  : F2 key (Default setting)
- Connect the AC adaptor and do not remove it until reinstallation is complete.


■ Remove everything and reinstall Windows

You can reinstall the OS that was pre-installed at the time of purchase (Windows 8.1).

Preparation

- <Only for model with TPM> Connect the external keyboard.
- Remove all peripherals.

1 Perform “Remove everything and reinstall Windows”.

- ① Open the charms, and touch  - [Change PC settings] - [Update and recovery] - [Recovery].
- ② Touch [Get Started] under "Remove everything and reinstall Windows".
- ③ Touch [Next].
- ④ Select the option.
 - [Just remove my files]
Perform the reinstallation of Windows in a few moments (Approximately 20 minutes).
 - [Fully clean the drive]
By fully cleaning, the deleted files can not be recovered easily and the security level will be increased. The processing time will be longer (Approximately 140 minutes).
- ⑤ Follow the on-screen instructions.
After the reinstallation, the computer will restart.
- Do not interrupt installation, for example by turning off the computer or performing other operation.
Otherwise installation may become unavailable as Windows may not start up or the data may be corrupted.

2 Perform the “First-time Operation” (→ page 6).


NOTE

- The date and time, and the time zone may not be correct. Be sure to set them correctly.

3 Perform Windows Update.

Reinstalling Software

4 <Only for model with TPM> Clear TPM.

- ① Perform either of the following procedures.
 - Long touch  at the bottom left corner of the desktop screen.
 - Slide up from the middle of the Start screen with a finger.
- ② Touch [Run], then input "tpm.msc" and touch [OK].
- ③ Touch [Clear TPM ...] under "Actions" on the right of the "TPM Manager on Local Computer" screen.
- ④ Touch [Restart] of the "Clear the TPM security hardware" screen.
The computer will restart.
- ⑤ When "TPM configuration change was requested to ..." is displayed, press **F12**.
- ⑥ Touch the Desktop tile, and when "TPM is ready" appears, touch [Close].


■ Flash memory Recovery

If the problem persists after performing "Remove everything and reinstall Windows", follow the instructions below.

Preparation

- <Only for model with TPM> Connect the external keyboard.
- Remove all peripherals.

1 Start the Setup Utility.

- ① Open the charms, and touch  - [Change PC settings] - [Update and recovery] - [Recovery].
- ② Touch [Restart now] under "Advanced startup".
- ③ Touch [Troubleshoot] - [Advanced options] - [UEFI Firmware Settings] - [Restart].
 - If the password is requested, enter the Supervisor Password.

2 Write down all of the contents of the Setup Utility and touch [Exit] and double-touch [Load Default Values].

At the confirmation message, touch [Yes].

3 Check the [UEFI Boot] setting of the Setup Utility.

When reinstalling Windows 8.1: [Enabled]

4 Touch [Exit] and double-touch [Save Values and Reboot].

At the confirmation message, touch [Yes].

Computer will restart.

5 Press (Rotation lock) button while "Panasonic" boot screen is displayed.

The Setup Utility starts up.

- If the password is requested, enter the Supervisor Password.

6 Touch [Exit] and double-touch [Recovery Partition].

7 Touch [Next].

8 Touch [YES].

9 At the License Agreement screen, touch [Yes, I agree to the provisions above and wish to continue!] and touch [Next].

10 Touch [Next].

If the option is displayed, select the setting and touch [Next].

- [Reinstall Windows to the System Disk to factory default.]
Select this option when you want to install Windows to the factory default. After installation, you can create a new partition. For how to create a new partition, refer to “To change the partition structure” (→ page 8).
- [Reinstall to the OS related partitions.]*¹
Select this option when the flash memory has already been divided into several partitions. For how to create a new partition, refer to “To change the partition structure” (→ page 8). You can keep the partition structure.
^{*1} This does not appear if Windows cannot be installed to the recovery partition and the area usable by Windows.

11 At the confirmation message, touch [YES].

Installation starts according to the instructions on the screen. (It will take approximately 20 minutes.)

- Do not interrupt installation, for example by turning off the computer or other operation. Otherwise installation may become unavailable as Windows may not start up or the data may be corrupted.

12 When Ending process screen is displayed, touch [OK] to turn off the computer.**13 Perform the “First-time Operation” (→ page 6).****NOTE**

- The date and time, and the time zone may not be correct. Be sure to set them correctly.
- If the password is requested, enter the Supervisor Password.

14 Start the Setup Utility and change the settings as necessary.**15 Perform Windows Update.****16 <Only for model with TPM> Clear TPM (→ page 16).**


Reinstalling Software

■ Using Recovery Disc

Use the Recovery Disc in the following conditions.


- You have forgotten the administrator password.
- Installation is not complete. The recovery partition in the flash memory may be broken.

Preparation

- Prepare the following items:
 - Recovery Disc (→  *Reference Manual* "Recovery Disc Creation Utility")
 - USB DVD drive (optional) (refer to recent catalogs and other sources for information about the products available)
 - <Only for model with TPM> External keyboard
- Remove all peripherals (except for the USB DVD drive).

1 Connect the DVD drive to the USB port.

2 Start the Setup Utility.

- ① Open the charms, and touch  - [Change PC settings] - [Update and recovery] - [Recovery].
 - ② Touch [Restart now] under "Advanced startup".
 - ③ Touch [Troubleshoot] - [Advanced options] - [UEFI Firmware Settings] - [Restart].
- If the password is requested, enter the Supervisor Password.

3 Write down all of the contents of the Setup Utility and touch [Exit] and double-touch [Load Default Values].

At the confirmation message, touch [Yes].

4 Check the [UEFI Boot] setting of the Setup Utility.

When installing Windows 8.1: [Enabled]

5 Set the Recovery Disc into the DVD drive.

6 Touch [Exit] and double-touch [Save Values and Reboot].

At the confirmation message, touch [Yes].

The computer will restart.

7 Press (Rotation lock) button while "Panasonic" boot screen is displayed.

The Setup Utility starts up.

- If the password is requested, enter the Supervisor Password.

8 Touch [Exit], then double-touch your DVD drive in [Boot Override].

The computer will restart.

9 Touch [Reinstall Windows.] and touch [Next].

10 Touch [YES].

11 At the License Agreement screen, touch [Yes, I agree to the provisions above and wish to continue!] and touch [Next].

12 Touch [Next].

If the option is displayed, select the setting and touch [Next].

- [Reinstall Windows to the System Disk to factory default.]
Select this option when you want to install Windows to the factory default. After installation, you can create a new partition. For how to create a new partition, refer to “To change the partition structure” (→ page 8).
- [Reinstall to the OS related partitions.]*¹
Select this option when the flash memory has already been divided into several partitions. For how to create a new partition, refer to “To change the partition structure” (→ page 8). You can keep the partition structure.
^{*1} This does not appear if Windows cannot be installed to the recovery partition and the area usable by Windows.

13 At the confirmation message, touch [YES].

Installation starts according to the instructions on the screen. (It will take approximately 30 - 45 minutes.)

- Do not interrupt installation, for example by turning off the computer.
Otherwise installation may become unavailable as Windows may not start up or the data may be corrupted.

14 When the "Insert No.2 Media into optical drive." message is displayed, replace with the other disc and then touch [OK].**15 When Ending process screen is displayed, remove the Recovery Disc and DVD Drive and then touch [OK].**

Follow the on-screen instructions.

Some models may take approximately 40 minutes.


16 Perform the “First-time Operation” (→ page 6).**NOTE**

- The date and time, and the time zone may not be correct. Be sure to set them correctly.



17 Start the Setup Utility and change the settings as necessary.**18 Perform Windows Update.****19 <Only for model with TPM> Clear TPM (→ page 16).**

Connect the external keyboard.






Troubleshooting (Basic)

Follow the instructions below when a problem has occurred. There is also an advanced troubleshooting guide in the “Reference Manual”. For a software problem, refer to the software’s instruction manual. If the problem persists, contact Panasonic Technical Support. You can also check the computer’s status in the PC Information Viewer (→  *Reference Manual* “Troubleshooting (Advanced)”).

■ Starting Up

Cannot start up. The power indicator or battery indicator is not lit.	<ul style="list-style-type: none"> ● Connect the AC adaptor. ● Remove the AC adaptor, and then connect it again. ● If a device is connected to the USB port, disconnect the device, or set [USB Port] or [Legacy USB Support] to [Disabled] in the [Advanced] menu of the Setup Utility. ● Check the [UEFI Boot] setting of the Setup Utility. [UEFI Boot] should be set to [Enabled].
You have forgotten the password.	<ul style="list-style-type: none"> ● Supervisor Password or User Password: Contact Panasonic Technical Support. ● Administrator password: <ul style="list-style-type: none"> • If you have a password reset disk, you can reset the administrator password. Set the disk and enter any wrong password, then follow the on-screen instructions and set a new password. • If you do not have a password reset disk, reinstall (→ page 15) and set up Windows, and then set a new password.
“Remove disks or other media. Press any key to restart” or a similar message appears.	<ul style="list-style-type: none"> ● If a device is connected to the USB port, disconnect the device, or set [USB Port] or [Legacy USB Support] to [Disabled] in the [Advanced] menu of the Setup Utility. ● If the problem persists after removing the disk, it may be a flash memory failure. Contact Panasonic Technical Support.
Windows startup and operation is slow.	<ul style="list-style-type: none"> ● Start the Setup Utility (→  <i>Reference Manual</i> “Setup Utility”) to return the Setup Utility settings (excluding the passwords) to the default values. Start the Setup Utility and make the settings again. (Note that the processing speed depends on the application software, so this procedure may not make Windows faster.) ● If you installed a resident software after purchase, turn off the residence.
The date and time are incorrect.	<ul style="list-style-type: none"> ● Make the correct settings. <ol style="list-style-type: none"> ① Perform either of the following procedures. <ul style="list-style-type: none"> ● Long touch  at the bottom left corner of the desktop screen. ● Slide up from the middle of the Start screen with a finger. ② Touch [Control Panel]. ③ Touch [Clock, Language, and Region] - [Date and Time]. ● If the problem persists, the internal clock battery may need to be replaced. Contact Panasonic Technical Support. ● When the computer is connected to LAN, check the date and time of the server. ● The 2100 A.D. or later year will not be correctly recognized on this computer.

■ Starting Up

[Executing Battery Recalibration] screen appears.	<ul style="list-style-type: none"> ● The Battery Recalibration was canceled before Windows was shut down last time. To start up Windows, turn off the computer by the power switch, and then turn on.
[Enter Password] does not appear when resuming from sleep/ hibernation.	<ul style="list-style-type: none"> ● Select [Enabled] in [Password On Resume] in the [Security] menu of the Setup Utility (→  <i>Reference Manual</i> "Setup Utility"). ● The Windows password can be used instead of the password set in the Setup Utility. <ol style="list-style-type: none"> ① Add a password. <ol style="list-style-type: none"> 1. Open the charms, and touch  - [Change PC settings] - [Accounts]. 2. Touch [Sign-in options], and touch [Add] under "Password". ② Perform either of the following procedures. <ul style="list-style-type: none"> ● Long touch  at the bottom left corner of the desktop screen. ● Slide up from the middle of the Start screen with a finger. <ol style="list-style-type: none"> 1. Touch [Control Panel]. 2. Touch [System and Security] - [Power Options] - [Require a password on wakeup] and add a check mark for [Require a password].
Cannot resume.	<ul style="list-style-type: none"> ● One of the following operations may have been carried out. Press the power switch to turn on the computer. Data not saved will be lost. <ul style="list-style-type: none"> • In sleep mode, the AC adaptor was disconnected, or a peripheral was connected or disconnected. • The power switch was pressed for four seconds or longer to forcibly turn off the computer. ● An error may occur when the computer automatically enters the sleep or hibernation mode while the screensaver is active. In this case, turn off the screensaver or change the pattern of the screensaver.
Other startup problems.	<ul style="list-style-type: none"> ● Start the Setup Utility (→  <i>Reference Manual</i> "Setup Utility") to return the Setup Utility settings (excluding the passwords) to the default values. Start the Setup Utility and make the settings again. ● Remove all peripheral devices. ● Check to see if there was a disk error. <ol style="list-style-type: none"> ① Remove all peripheral devices including an external display. ② Perform either of the following procedures. <ul style="list-style-type: none"> ● Long touch  at the bottom left corner of the desktop screen. ● Slide up from the middle of the Start screen with a finger. ③ Touch [File Explorer]. ④ Long touch [Windows (C:)], and touch [Properties]. ⑤ Touch [Tools] - [Check]. ⑥ Follow the on-screen instructions.

Troubleshooting (Basic)


■ Entering Password

Even after entering the password, password input screen is displayed again.	<p><Only if the external keyboard is connected></p> <ul style="list-style-type: none"> ● The computer may be in ten-key mode. Disable the ten-key mode, and then input. ● The computer may be in Caps Lock mode. Disable the Caps Lock mode, and then input.
Cannot sign in to Windows. ("The user name or password is incorrect." is displayed.)	<ul style="list-style-type: none"> ● The user name (account name) includes an "@" mark. <ul style="list-style-type: none"> - If another user account name exists: Sign in to Windows using another user account name, and delete the account name that includes "@". Then create a new account name. - If no other account name exists: You need to reinstall Windows (→ page 15).

■ Shutting down

Windows does not shut down.	<ul style="list-style-type: none"> ● Remove the USB devices. ● Wait one or two minutes. It is not a malfunction.
-----------------------------	--

■ Display

No display.	<ul style="list-style-type: none"> ● The external display may be selected. <ol style="list-style-type: none"> ① Open the charms, and touch  - [Project]. ② Select the display mode. ● When using an external display, <ul style="list-style-type: none"> • Check the cable connection. • Turn on the display. • Check the settings of external display. ● The display is turned off by the power-saving function. Touch the screen. ● The computer entered sleep or hibernation by the power-saving function. To resume, press the power switch.
The screen is dark.	<ul style="list-style-type: none"> ● The screen is darker when the AC adaptor is not connected. Open the Dashboard for Panasonic PC and adjust the brightness. As you increase the brightness, battery consumption increases. You can separately set the brightness for when the AC adaptor is connected and when not connected. ● Under factory default settings, the brightness of the display screen will adjust automatically based on the ambient light detected by the ambient light sensor. You can adjust the settings for this sensor (→ page 11).

■ Display

The screen is disordered.	<ul style="list-style-type: none"> ● Changing the number of display colors and resolution may affect the screen. Restart the computer. ● Connecting/disconnecting an external display may affect the screen. Restart the computer.
The external display does not work normally.	<ul style="list-style-type: none"> ● If the external display does not support the power saving function, it may not work normally when the computer enters the power saving mode. Turn off the external display.
Cannot rotate the display.	<ul style="list-style-type: none"> ● The application program currently running may not support the image rotation. Quit the program, and then try to rotate the image. This can ameliorate the status. ● When the automatic rotation is off, screen display does not rotate automatically. ● When an external display is connected to the computer and the computer is rotated while in the [Extend] mode: The screen display on the external display does not rotate. The screen display on the internal LCD remains landscape, and does not rotate.

■ Screen



The pointer does not work.	<ul style="list-style-type: none"> ● When using the external mouse, connect it correctly. ● Restart the computer using the external keyboard/mouse. ● If the computer does not respond to external keyboard/mouse commands, read "No response" (➔ page 24).
The touchscreen does not work properly.	<ul style="list-style-type: none"> ● Make sure that the grounding of the AC plug is connected properly. ● If a device that emits strong radio waves near this product, should be kept away. ● When the computer enters Safe Mode, please operate it with an external mouse. ● The problem may be improved by adjusting the sensitivity using the following application software. <ol style="list-style-type: none"> ① Slide up from the middle of the Start screen with a finger. ② Touch [Touch Screen Control Panel] under "ELAN". Follow the instructions on the screen.
Want to disable touch operation.	<ul style="list-style-type: none"> ● Using the following application software disables touchscreen operation. <ol style="list-style-type: none"> ① Slide up from the middle of the Start screen with a finger. ② Touch [Touch Screen Switch Utility] under "Panasonic". Follow the instructions on the screen.

■ On-screen Manual

"This page cannot be displayed" or "Script Error" displayed.	<ul style="list-style-type: none"> ● Touch other page in on-screen manual. ● Quit and restart the on-screen manual.
--	---

Troubleshooting (Basic)

■ Others

No response.	<ul style="list-style-type: none"> ● Open Task Manager and close the software application that is not responding. ● An input screen (e.g., password input screen at startup) may be hidden behind another window. Touch the application icons at the bottom of the screen to check. ● Press the power switch for four seconds or longer to shut down the computer, and then press the power switch to turn it on. If the application program does not work normally, uninstall and reinstall the program. To uninstall, <ol style="list-style-type: none"> ① Perform either of the following procedures. <ul style="list-style-type: none"> ● Long touch  at the bottom left corner of the desktop screen. ● Slide up from the middle of the Start screen with a finger. ② Touch [Control Panel]. ③ Touch [Programs] - [Uninstall a program]. ● When connecting a peripheral device to use with this computer for the first time, updating the driver may take a few minutes. Please wait it is completed. ● By a strong radio waves noise from the outside, touchscreen may not work properly. <ul style="list-style-type: none"> • If a device that emits strong radio waves near this product, should be kept away. • Make sure that the grounding of the AC plug is connected properly. • If source of the radio waves cannot be kept away, please operate it with an external mouse.
Cannot connect to a network.	<ul style="list-style-type: none"> ● Set the device ([Wireless LAN] / [Bluetooth] of [Wireless Configuration]) to [Enabled] in the [Advanced] menu of the Setup Utility (Wireless Configuration). ● ① Open the charms, and touch  - [Change PC settings] - [Network] - [Airplane mode*¹]. ● ② Set "Airplane mode*¹" to [Off], and then; <ul style="list-style-type: none"> set "Wi-Fi" to [On] (for wireless LAN). set "Bluetooth" to [On] (for Bluetooth). <p>*¹ : Screen messages are explained in [English (United States)]. (Depending on the language preference, some screen messages in these instructions are different from the actual screen messages. For example, [Flight mode] may be displayed instead of [Airplane mode] in some language preference.)</p>

LIMITED USE LICENSE AGREEMENT

THE SOFTWARE PROGRAM(S) ("PROGRAMS") FURNISHED WITH THIS PANASONIC PRODUCT ("PRODUCT") ARE LICENSED ONLY TO THE END-USER ("YOU"), AND MAY BE USED BY YOU ONLY IN ACCORDANCE WITH THE LICENSE TERMS DESCRIBED BELOW. YOUR USE OF THE PROGRAMS SHALL BE CONCLUSIVELY DEEMED TO CONSTITUTE YOUR ACCEPTANCE OF THE TERMS OF THIS LICENSE.

Panasonic Corporation has developed or otherwise obtained the Programs and hereby licenses their use to you. You assume sole responsibility for the selection of the Product (including the associated Programs) to achieve your intended results, and for the installation, use and results obtained therefrom.

LICENSE

- A. Panasonic Corporation hereby grants you a personal, non-transferable and non-exclusive right and license to use the Programs in accordance with the terms and conditions stated in this Agreement. You acknowledge that you are receiving only a LIMITED LICENSE TO USE the Programs and related documentation and that you shall obtain no title, ownership nor any other rights in or to the Programs and related documentation nor in or to the algorithms, concepts, designs and ideas represented by or incorporated in the Programs and related documentation, all of which title, ownership and rights shall remain with Panasonic Corporation or its suppliers.
- B. You may use the Programs only on the single Product which was accompanied by the Programs.
- C. You and your employees and agents are required to protect the confidentiality of the Programs. You may not distribute or otherwise make the Programs or related documentation available to any third party, by time-sharing or otherwise, without the prior written consent of Panasonic Corporation.
- D. You may not copy or reproduce, or permit to be copied or reproduced, the Programs or related documentation for any purpose, except that you may make one (1) copy of the Programs for backup purposes only in support of your use of the Programs on the single Product which was accompanied by the Programs. You shall not modify, or attempt to modify, the Programs.
- E. You may transfer the Programs and license them to another party only in connection with your transfer of the single Product which was accompanied by the Programs to such other party. At the time of such a transfer, you must also transfer all copies, whether in printed or machine readable form, of every Program, and the related documentation, to the same party or destroy any such copies not so transferred.
- F. You may not remove any copyright, trademark or other notice or product identification from the Programs and you must reproduce and include any such notice or product identification on any copy of any Program.

YOU MAY NOT REVERSE ASSEMBLE, REVERSE COMPILE, OR MECHANICALLY OR ELECTRONICALLY TRACE THE PROGRAMS, OR ANY COPY THEREOF, IN WHOLE OR IN PART.

YOU MAY NOT USE, COPY, MODIFY, ALTER, OR TRANSFER THE PROGRAMS OR ANY COPY THEREOF, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THE LICENSE.

IF YOU TRANSFER POSSESSION OF ANY COPY OF ANY PROGRAM TO ANOTHER PARTY, EXCEPT AS PERMITTED IN PARAGRAPH E ABOVE, YOUR LICENSE IS AUTOMATICALLY TERMINATED.

LIMITED USE LICENSE AGREEMENT

TERM


This license is effective only for so long as you own or lease the Product, unless earlier terminated. You may terminate this license at any time by destroying, at your expense, the Programs and related documentation together with all copies thereof in any form. This license will also terminate effective immediately upon occurrence of the conditions thereof set forth elsewhere in this Agreement, or if you fail to comply with any term or condition contained herein. Upon any such termination, you agree to destroy, at your expense, the Programs and related documentation together with all copies thereof in any form.

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU FURTHER AGREE THAT IT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF THE AGREEMENT BETWEEN US, WHICH SUPERSEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS BETWEEN US, RELATING TO THE SUBJECT MATTER OF THIS AGREEMENT.

Specifications

This page provides the specifications for the basic model.

The model number is different according to the unit configuration.

- To check the model number:
Check the bottom of the computer or the box the computer came in at the time of purchase.
- To check CPU speed, memory size and the flash memory drive size:
Run the Setup Utility (→  *Reference Manual* "Setup Utility") and select [Information] menu.
"Processor Speed": CPU speed, "Memory Size": Memory size, "Hard Disk": Flash Memory drive size

■ Main Specifications

Model No.		UT-MA6027HEZ	
CPU		Intel® Core™ i7-3687U vPro™ Processor (4 MB ^{*1} cache, up to 3.30 GHz) with Intel® Turbo Boost Technology	
Chipset		Mobile Intel® QM77 Express Chip set	
Video controller		NVIDIA® QUADRO® K1000M	
Memory ^{*1}		16 GB	
Video Memory ^{*1,2}		2 GB dedicated VRAM	
Storage ^{*3}		Flash memory drive: 256 GB	
		Approx. 14 GB is used as a partition with flash memory recovery tools. (Users cannot use this partition.)	
		Approx. 1 GB is used as a partition with system tools. (Users cannot use this partition.)	
Display Method		20" IPS α , 230ppi, Aspect ratio 15:10	
Internal LCD		16,777,216 colors (3840 × 2560 dots)	
External Display ^{*4}	DisplayPort™ ^{*5}	16,777,216 colors (3840 × 2160 dots Max.)	
	HDMI ^{*6}	16,777,216 colors (1920 × 1200 dots Max.)	
Wireless LAN		Intel® Centrino® Advanced-N 6235 (a/b/g/n) (→ page 28)	
LAN		IEEE 802.3 10Base-T/IEEE 802.3u 100Base-TX/IEEE 802.3ab 1000Base-T	
Bluetooth ^{*7}		→ page 29	
Sound	Speaker	WAVE and MIDI playback, Intel® High Definition Audio subsystem support, Stereo speaker	
	Microphone	Internal mic for camera	
Security Chip		TPM (TCG V1.2 compliant) ^{*8}	
Camera	Front	1280 × 720 dots, 30 fps (Video)	
	Rear	1280 × 720 dots, 30 fps (Video) / 2592 × 1944 dots (Still)	
Sensor	Ambient light sensor	Equipped	
	Magnetic sensor		
	Gyro sensor		
	Acceleration sensor		
Card Slot	Smart Card ^{*9}	x 1	
	SD Memory Card ^{*10}	x 1	
Interface		USB port 3.0 × 1 ^{*11} , LAN port (RJ-45), Mini DisplayPort™, Expansion Bus Connector, Headphone (Miniature jack, 3.5 DIA / Impedance 32 Ω , Output Power 4 mW × 2, Stereo)	

Specifications

■ Main Specifications

Model No.			UT-MA6027HEZ		
Pointing Device			Capacitive Multi touch screen (up to 10 touch) / Electronic Touch Pen (optional)		
Power Supply			AC adaptor or internal battery		
AC Adaptor ^{*12}			Input: 100 V to 240 V AC, 50 Hz/60 Hz, Output: 15.6 V DC, 7.05 A		
Internal Battery			Li-ion 11.1 V, 4770 mAh (typ.), 4590 mAh (min.) (Not replaceable by user)		
Operating Time ^{*13}			Approx. 2.5 hours		
Charging Time ^{*14}	Power on		Approx. 4.0 hours		
	Power off		Approx. 2.5 hours		
Power Consumption ^{*15}			Approx. 65 W ^{*16} / Approx. 105 W (maximum when recharging in the ON state)		
Physical Dimensions (W × D × H)			475 mm × 334 mm × 12.5 mm (without protruding parts)		
Weight			Approx. 2.54 kg		
Environment	Operating	Temperature	5 °C to 35 °C		
		Humidity	30% to 80% RH (No condensation)		
	Storage	Temperature	-20 °C to 60 °C		
		Humidity	30% to 90% RH (No condensation)		

■ Software

Base OS	Windows® 8.1 Pro Update 64-bit
Installed OS ^{*17}	Windows® 8.1 Pro Update 64-bit
Pre-installed Software ^{*17}	PC Information Viewer, Battery Recalibration Utility, Infineon TPM Professional Package ^{*8} ^{*18} , Dashboard for Panasonic PC, Recovery Disc Creation Utility, Power Plan Extension Utility, Manual Selector, Wireless Toolbox, Intel® PROSet/Wireless Software, Intel® PROSet/Wireless Software for Bluetooth® Technology, Touch Screen Control Panel, Touch Screen Switch Utility Aptio Setup Utility ^{*19} , PC-Diagnostic Utility, Hard Disk Data Erase Utility ^{*20}

■ Wireless LAN

Data Transfer Rates	IEEE802.11a: 54/48/36/24/18/12/9/6 Mbps (automatically switched) ^{*21} IEEE802.11b: 11/5.5/2/1 Mbps (automatically switched) ^{*21} IEEE802.11g: 54/48/36/24/18/12/9/6 Mbps (automatically switched) ^{*21} IEEE802.11n ^{*22} : (HT20) GI ^{*23} = 400ns: 150/130/115/86/72/65/57/43/28/21/14/7 Mbps (automatically switched) ^{*21} GI ^{*23} = 800ns: 130/117/104/78/65/58/52/39/26/19/13/6 Mbps (automatically switched) ^{*21} (HT40) GI ^{*23} = 400ns: 300/270/240/180/150/135/120/90/60/45/30/15 Mbps (automatically switched) ^{*21} GI ^{*23} = 800ns: 270/243/216/162/135/121/108/81/54/40/27/13 Mbps (automatically switched) ^{*21}
Standards Supported	IEEE802.11a / IEEE802.11b / IEEE802.11g / IEEE802.11n

■ Wireless LAN

Transmission method	OFDM system, DSSS system
Wireless Channels Used	IEEE802.11a: Channels 36/40/44/48/52/56/60/64/100/104/108/112/116/120/124/128/132/136/140 IEEE802.11b / IEEE802.11g: Channels 1 to 13 IEEE802.11n: Channels 1-13/36/40/44/48/52/56/60/64/100/104/108/112/116/120/124/128/132/136/140
RF Frequency Band	IEEE802.11a: 5.18 GHz - 5.32 GHz, 5.5 GHz - 5.7 GHz IEEE802.11b / IEEE802.11g: 2.412 GHz - 2.472 GHz IEEE802.11n: 2.412 GHz - 2.472 GHz, 5.18 GHz - 5.32 GHz, 5.5 GHz - 5.7 GHz

■ Bluetooth^{*7}

Bluetooth Version	4.0
	Classic mode / Low Energy mode
Transmission method	FHSS system
Wireless Channels Used	Channels 1 to 79 / Channels 0 to 39
RF Frequency Band	2.402 GHz - 2.480 GHz

^{*1} 1 MB = 1,048,576 bytes/1 GB = 1,073,741,824 bytes

^{*2} A segment of the main memory is allotted automatically depending on the computer's operating status. The size of the Video Memory cannot be set by the user.

^{*3} 1 MB = 1,000,000 bytes/1 GB = 1,000,000,000 bytes. Your operating system or some application software will report as fewer GB.

^{*4} Selectable resolution depends on the specifications of the external display. Display may be impossible using some connected external displays.

^{*5} Use the DisplayPort cable with a ferrite core.

^{*6} Only when connected to Cradle (optional).

DRM(Digital Rights Management) contents are not available through HDMI connector of Cradle.

^{*7} Does not guarantee operation of all Bluetooth peripherals.

^{*8} Only for model with TPM.

On the Start screen, touch the [Manual Selector] tile, and select "Installation Manual for Trusted Platform Module (TPM)".

^{*9} Only for model with Smart Card slot.

^{*10} Operation has been tested and confirmed using Panasonic SD Memory Card with a capacity of up to 2 GB, Panasonic SDHC Memory Card with a capacity of up to 32 GB, and Panasonic SDXC Memory Card with a capacity of up to 64 GB.

Operation on other SD equipment is not guaranteed.

^{*11} Does not guarantee operation of all USB-compatible peripherals.

^{*12} The AC adaptor is compatible with power sources up to 240 V AC adaptor.

^{*13} Measured at LCD brightness: 60 cd/m²

Varies depending on the usage conditions, or when an optional device is attached.

^{*14} Varies depending on the usage conditions.

^{*15} Approx. 0.5 W when the battery is fully charged (or not being charged) and the computer is OFF.

Even when the AC adaptor is not connected to the computer, power is consumed (Max. 0.3 W) simply by having the AC adaptor plugged into an AC outlet.

^{*16} Rated power consumption ^{23-E-1}

^{*17} Operations of this computer are not guaranteed except for the pre-installed OS and the OS which is installed by using the flash memory recovery and the recovery disc.

^{*18} Must be installed before use.

^{*19} In this manual, the "Aptio Setup Utility" is referred to as "Setup Utility".

^{*20} Perform on the recovery disc.

^{*21} It does not correspond to IEEE802.11a+b+g+n standards.

Actual speeds may differ.

^{*22} Available when set to "WPA-PSK", "WPA2-PSK" or "none".

^{*23} Only available when HT40 enabled by the computer and access point which associated supports HT40.

Standard Limited Warranty

For Europe

Panasonic System Communications Company Europe

Panasonic System Communications Company Europe (referred to as "Panasonic") will repair this product (other than software, which is treated in a different section of this warranty) with new or refurbished parts, from the date of original purchase in the event of a defect in materials or workmanship. This warranty only applies to new Panasonic Toughbooks purchased in the EEA and Switzerland and Turkey.

Panasonic (or its authorised Service Provider) target to repair your equipment within 48 hours from its receipt in our service centre.

Additional charges may apply for shipment to countries outside of the European Union. Panasonic will use all reasonable endeavours to ensure this service.

This warranty only covers failures due to defects in materials or workmanship which occur during normal use for the applicable Service Agreement Period listed below. In the event that any product (or part thereof) is replaced, Panasonic shall transfer ownership of the replacement product (or part) to the customer and the customer shall transfer ownership of the replaced product (or part) to Panasonic.

Service Agreement Period - from original date of purchase

- Toughbooks (and every accessory included in the original packaging except the battery) - 3 years
- Toughpads (and every accessory included in the original packaging except the battery) - 3 years
- Accessories included in the original package - 3 years
- Additional peripherals manufactured by Panasonic (including media bay devices such as CD-Rom drives) - 1 year
- Batteries - 6 months. Panasonic Warranty covers the battery for six months. A battery is considered good if it maintains 50% of its charge capacity during the warranty period. If a battery is returned under this contract and testing determines that it has charge capacity greater than 50%, the battery will be returned with an invoice for the retail purchase price of a new battery.

This warranty is extended solely to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

Limits and Exclusions:

This warranty does not cover and shall be void for:

- Broken or cracked LCD screen.
- Defective pixel in notebook displays and LCD screens within 0.002%
- Damage that is attributable to fire, theft or acts of God.
- Damage caused by environmental influences (electrical storms, magnetic fields, etc.).
- Damage which has not been caused during normal operation
- Repair of damage that is cosmetic only or does not affect product functionality such as wear and tear, scratches and dents.
- Failures caused by products not supplied by Panasonic.
- Failures resulting from alteration, accidental damage, casualty, misuse, abuse or neglect.
- Introduction of liquid or other foreign matter into the unit.
- Improper installation, operation or maintenance.
- Improper connections with peripherals.
- Maladjustment of consumer controls such as function settings.
- Modification or service by anyone other than Panasonic or its approved Service Providers.
- Products used as short term rental or leased equipment.
- Products whose serial number has been removed making the unit warranty condition impossible to clearly determine.

THIS PRODUCT IS NOT INTENDED FOR USE AS, OR AS PART OF, NUCLEAR EQUIPMENT/SYSTEMS, AIR TRAFFIC CONTROL EQUIPMENT/SYSTEMS, OR AIRCRAFT COCKPIT EQUIPMENT/SYSTEMS. PANASONIC WILL NOT BE RESPONSIBLE FOR ANY LIABILITY RESULTING FROM THE USE OF THIS PRODUCT ARISING OUT OF THE FOREGOING USES.

There are no other express warranties except as listed above.

We strongly recommend that customers backup their data before sending back their unit to an Authorised Service Provider.

Panasonic shall not be liable for loss of data or other incidental or consequential damages resulting from the use of this product, or arising out of any breach of this warranty. All express and implied warranties, including the warranties of satisfactory quality and fitness for a particular purpose are limited to the applicable warranty period set forth above. Panasonic shall not be liable for any indirect, special or consequential loss or damage (including without limitation any loss of profits) arising from the use of this product or for any breach of this warranty.

This limited warranty gives you specific legal rights, and you may have other rights that vary from country to country. You must consult the applicable country laws for a full determination of your rights. This limited warranty is in addition to, and does not affect any rights arising out of any contract of sale or by statute.

Panasonic System Communications Company Europe

Data Storage Media

Data Storage Media is the media on which the Operating System, drivers and programs originally installed by Panasonic on the main unit are stored. This media is originally provided with the unit.

Panasonic warrants to you only that the disc(s) or other media on which the Programs are furnished will be free from defects in material and workmanship under normal use for a period of sixty (60) days from the date of delivery thereof to you, as evidenced by your purchase receipt.

This is the only warranty Panasonic makes to you. Panasonic does not warrant that the functions contained in the Programs will meet your requirements or that the operation of the Programs will be uninterrupted or error free.

Panasonic's entire liability and your exclusive remedy under this warranty shall be limited to the replacement of any defective disk or other media which is returned to Panasonic's authorized Service Centre, together with a copy of the purchase receipt, within the aforesaid warranty period.

Panasonic shall have no obligation for any defects in the disk(s) or other media on which the Programs are furnished resulting from your storage thereof, or for defects that have been caused by operation of the disk(s) or other media otherwise than on the Product or in the environment conditions other than those specified by Panasonic by alteration, accident, misuse, abuse, neglect, mishandling, misapplication, installation, maladjustment of consumer controls, improper maintenance, modification or damage that is attributable to acts of God. In addition, Panasonic shall have no obligation for any defects in the disk(s) or other media if you have modified, or attempted to modify any Program.

Duration of implied warranties, if any is limited to sixty (60) days.

Pre-installed software

Pre-installed software means the software shipped pre-loaded by Panasonic, not that loaded by any third party or selling agent.

Standard Limited Warranty

Panasonic and its suppliers makes no warranty, either express, implied or statutory, with respect to software provided with the Product and licensed to Purchaser, its quality, performance, merchantability, or fitness for a particular purpose. Panasonic does not warrant that the functions contained in the software will be uninterrupted or error free. Panasonic assumes no risk of and shall not in any case be liable for any damages, including, without limitation, any special, incidental, consequential, or punitive damages arising from breach of warranty or contract, negligence or any other legal theory, including, without limitation loss of goodwill, profits or revenue, loss of use of the Programs or Products or any associated equipment, cost of capital, cost of any substitute equipment, facilities, or services, downtime costs, or claims of any party dealing with such damages.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights and you may also have other rights that vary from country to country. You must consult applicable country laws for a full determination of your rights.

Contacts

Address

Panasonic System Communications Company Europe
Panasonic Manufacturing U.K. Ltd.
Service Centre Building B4,
Wyncliffe Road, Pentwyn Industrial Estate, Cardiff,
United Kingdom
CF23 7XB

Web page

<http://www.toughbook.eu/>

Helpdesk

English speaking service	+44 (0) 8709 079 079
French speaking service	+33 (0) 1 47 91 64 99
German speaking service	+49 (0) 1805 410 930
Italian speaking service	+39 (0) 848 391 999
Spanish speaking service	+34 (0) 901 101 157
E-mail address	toughbooksupport@eu.panasonic.com

Czech speaking service	+420 (0) 800 143234
Hungarian speaking service	+36 (0) 6800 163 67
Polish speaking service	+48 (0) 800 4911558
Romanian speaking service	+40 (0) 800 894 743
Slovakian speaking service	+421 (0) 800 42672627
E-mail address	toughbooksupport@csg.de

Payments	toughbookservicepayments.cardiff@eu.panasonic.com
----------	--

Panasonic Corporation

Osaka, Japan

Importer's name & address pursuant to the EU legislation

**Panasonic System Communications Company Europe, Panasonic Marketing
Europe GmbH**

Hagenauer Straße 43

65203 Wiesbaden

Germany