

Panasonic®

Operating Instructions Tablet Computer

Model No. **FZ-E1** series

Thank you for purchasing a Panasonic product.

Please read this document carefully before using the product and keep this document in a safe place for future reference.

For detailed information about this product, refer to the Reference Manual, which is available by flicking the Start screen to the left, then tapping **[Online Manual]** in the All apps list. (Download required.)

Table of Contents

Introduction	3
Safety precautions	3
Regulatory information.....	13
Handling cautions	25
Trademark and license information	28
Terms and illustrations in this document	29
Disclaimers	30
Getting Started	31
Confirming the included items	31
Description of parts.....	32
Opening and closing the interface cover	36
Removing the battery cover.....	37
Attaching the battery cover	38
Installing a SIM card (certain models only).....	40
Installing an SD card.....	41
Installing the battery.....	42
Charging the battery	42
Turning the unit on and off.....	44
Screen display	45
Basic operations	47
Troubleshooting	49
Appendix	54
Replacing the battery.....	54
Enabling the internal heater.....	54
Factory data reset.....	55
Specifications.....	56
Accessories	61




Introduction

Safety precautions




To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbol word panels

The following symbol word panels are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

 DANGER	Denotes potential hazards that will result in serious injury or death.
 WARNING	Denotes potential hazards that could result in serious injury or death.
 CAUTION	Denotes potential hazards that could result in minor injury.
NOTICE	Denotes potential hazards that could result in property damage.

The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to specific operating procedures that must not be performed.
	This symbol is used to alert users to specific operating procedures that must be followed in order to operate the product safely.
	This symbol is used to alert users to specific operating procedures for which special attention is required.



WARNING



When using the product for extended periods, do not expose your skin to the product or AC adaptor for a prolonged period.

Generated heat can cause low-temperature burns.



Do not disassemble, repair, or modify the product.

These may cause electric shock or fire.



Do not insert foreign objects into the product.

This may cause the battery to short circuit or overheat, which may result in fire or electric shock.



Do not allow conductive metallic materials to touch the expansion bus connector.

This may cause a short circuit and overheating, which may result in rupture or fire.



Use only specified batteries.

Use of unspecified batteries may result in electrolyte leakage, overheating, rupture, or fire.



Use only specified AC adaptors.







Use of unspecified AC adaptors may result in overheating, fire, or rupture.















Stop using the product if any of the following occurs.

- Product emits smoke, unusual sound, or unusual smell
- Water or foreign object enters the product
- Product is damaged
- Product becomes unusually hot

Failure to do so may result in fire or electric shock. Turn the product off, disconnect it from the power supply, and then remove the battery. Contact your technical support representative for support or repair.


	Do not touch the product or cables during lightning storms if the product is connected to an AC adaptor. There is a remote chance of electric shock.
	Close the headset jack cover and interface cover when using the product near water or other liquids, and in areas with a high concentration of moisture, steam, dust, oily vapors, etc. Foreign material that enters the product may cause fire or electric shock. If foreign material enters the product, turn the product off, disconnect it from the power supply, and then remove the battery. Contact your technical support representative for support or repair.
	Keep SD cards out of the reach of infants and small children. Small objects are suffocation and choking hazards. In the event of accidental swallowing, seek medical help immediately.
	Keep SIM cards out of the reach of infants and small children. Small objects are suffocation and choking hazards. In the event of accidental swallowing, seek medical help immediately.
	Stop using the product immediately and consult your doctor if you feel any discomfort when staring at flashing lights on the screen. A very small percentage of individuals may experience seizures or blackouts when exposed to certain light patterns or flashing lights for extended periods.
	Do not use the product near automatic control equipment such as automatic doors, fire alarms, etc. RF signals generated by the product may interfere with the proper operation of such equipment.







	<p>Do not leave any water droplets on the product. Water droplets may cause the DC input jack, micro USB port, or headset jack to short circuit.</p>
	<p>Do not puncture the product with a sharp object. This may cause overheating or fire.</p>
	<p>Do not turn the volume up too loud when using headphones. Listening at high volumes for extended periods may result in loss of hearing.</p>
	<p>Do not operate the product while walking, driving, riding a bicycle, etc. Being distracted while engaging in these kinds of activities can cause accidents or falls.</p>
	<p>Do not use headphones while driving or in potentially dangerous areas or situations. Your inability to hear the sounds around you can cause accidents. Take special care at rail crossings, station platforms, roads, construction sites, etc.</p>
	<p>For models with an optional barcode reader: Do not look directly at the red beam for an extended period or point the barcode reader at another person's eyes. This may damage the eyes.</p>
	<p>Clean dust and other debris on the AC plug regularly. If dust or other debris accumulates on the plug, humidity, etc. may cause a defect in the insulation, which may result in a fire.</p> <ul style="list-style-type: none"> • Pull the plug, and wipe it with a dry cloth. <p>Pull the plug if the computer is not being used for a long period of time.</p>






	<p>Do not do anything that may damage the AC cord, the AC plug, or the AC adaptor.</p> <p>Do not damage or modify the cord, place it near hot tools, bend, twist, or pull it forcefully, place heavy objects on it, or bundle it tightly.</p> <p>Continuing to use a damaged cord may result in fire, short circuit, or electric shock.</p>
	<p>Do not expose the AC cord, AC adaptor, or the battery to water or other liquids.</p> <p>Doing so may cause a short circuit, generation of heat, overheating, or rupture, which may result in a fire, electric shocks, and/or injury.</p>
	<p>Do not pull or insert the AC plug if your hands are wet.</p> <p>Electric shock may result.</p>
	<p>Do not connect the AC adaptor to a power source other than a standard household AC outlet.</p> <p>Otherwise, a fire due to overheating may result. Connecting to a DC/AC converter (inverter) may damage the AC adaptor. On an airplane, only connect the AC adaptor/charger to an AC outlet specifically approved for such use.</p>
	<p>Insert the AC plug completely.</p> <p>If the plug is not inserted completely, fire due to overheating or electric shock may result.</p> <ul style="list-style-type: none"> • Do not use a damaged plug or loose AC outlet.



CAUTION

	<p>If glass components are damaged, be careful of broken glass or internal components that may become exposed.</p> <p>Failure to do so can cause injury.</p>
---	---

	<p>Do not place the product on an unstable surface. The product may drop, resulting in injury.</p>
	<p>Take a 10–15 minute break every hour when using the product. Using the product continuously for extended periods may cause strain injuries and may have detrimental health effects on your eyes, hands, or other parts of your body.</p>
	<p>Do not look directly at the flash or point it at another person's eyes. This may damage the eyes or cause temporary loss of eyesight which could result in an accident.</p>
	<p>Do not leave the product in extremely high temperature environments for an extended period. Leaving the product where it will be exposed to extremely high temperatures, such as near fire or in direct sunlight, may deform the product or cause damage or malfunction to its internal components. Using the product in these conditions may cause short circuit, insulation defects, etc., which may in turn cause fire or electric shock.</p>
	<p>Do not expose the skin to the product when using the product in hot or cold environments. Burns, low-temperature burns, or frostbite may result. If direct contact with the skin is necessary, perform the operation as quickly as possible.</p>
	<p>Turn down the volume before connecting headphones. After connecting the headphones, increase the volume gradually. If you connect headphones when the volume is set too high, your ears may be exposed to excessively high volume which may damage your hearing.</p>

	Do not stack the product. If balance is lost, the product may fall over or drop, resulting in an injury.
	For models with an optional barcode reader: Do not look directly at the white beam for an extended period or point the barcode reader at another person's eyes. This may damage the eyes.
	Hold the plug when unplugging the AC plug. Pulling on the cord may damage the cord, resulting in a fire or electric shock.
	Do not move this product while the AC plug is connected. The AC cord may be damaged, resulting in fire or electric shock. • If the AC cord is damaged, unplug the AC plug immediately.
	Do not subject the AC adaptor to any strong impact. Using the AC adaptor after a strong impact such as being dropped may result in electric shock, short circuit, or fire. • Contact your technical support representative for support or repair.

NOTICE

Do not place objects on the surface of the product or press down hard on the product with sharp objects.

The screen surface could be scratched.

When in low-temperature environments, dry off the product if it becomes wet.

If the product becomes wet in temperatures of 0 °C or below, freeze damage may occur.

Confirm the safety and security of software before downloading or installing it on the product.

Installing malware or viruses can cause malfunction and the disclosure of any private information stored in the product, or may cause excessive sound volume.

Turn off the product before removing the SIM card or SD card.

Failure to do so can result in data loss or damage to the SIM card, the SD card, or the product.

Do not place the product near a television or radio receiver.

This may cause television or radio interference.

Battery



DANGER



The battery is for use solely with the specified product. Do not use it with any other products.
Overheating, fire, or rupture may result.







Do not disassemble, modify, or insert sharp foreign objects into the battery.
Electrolyte leakage, overheating, fire, or rupture may result.



Do not crush, bend, deform, puncture, shred, throw, or apply high pressure to the battery.
These may cause a short circuit, electric shock, electrolyte leakage, overheating, rupture, or fire.








Do not use the battery if it becomes noticeably damaged or deformed.
Electrolyte leakage, overheating, smoke, rupture, or fire may result.

	<p>Do not short the positive (+) and negative (–) contacts. Do not carry the battery around or store it together with necklaces, hairpins, etc.</p> <p>Overheating, fire, or rupture may result.</p>
	<p>Do not throw the battery into a fire or expose it to excessive heat.</p> <p>Overheating, fire, or rupture may result.</p>
	<p>Keep the battery away from extreme heat, such as fire and direct sunlight.</p> <p>Electrolyte leakage, overheating, fire, or rupture may result.</p>
	<p>When charging the battery with a battery charger/ cradle, use only the specified charger/cradle.</p> <p>Overheating, fire, or rupture may result.</p>



WARNING

	<p>Do not subject the battery to strong impact, vibration, or rough handling.</p> <p>This may cause electrolyte leakage, overheating, rupture, or fire.</p>
	<p>Do not charge the battery using methods other than those specified.</p> <p>Improper battery use may cause electrolyte leakage, overheating, rupture, or fire.</p>
	<p>If electrolyte from the battery comes into contact with the eyes, skin, or clothing, rinse it off thoroughly.</p> <p>Electrolyte may cause blindness if it comes into contact with the eyes. If contact occurs, flush the eyes with clean water and seek medical advice.</p>

	<p>If the battery smells or leaks electrolyte, keep the battery away from fire. Overheating, fire, or rupture may result.</p>
	<p>Do not place the battery in microwave ovens or pressurized containers. Sudden application of heat may damage the battery's case, resulting in electrolyte leakage, overheating, smoke, rupture, or fire.</p>

Regulatory information

This product and your health

This product, like other radio devices, emits radio frequency electromagnetic energy. Because this product operates within the guidelines found in radio frequency safety standards and recommendations, we believe this product is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature. In some situations or environments, the use of this product may be restricted by the proprietor of the building or responsible representatives of the organization. These situations may for example include:

- Using this product on board of airplanes, or
- In any other environment where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies on the use of wireless devices in a specific organization or environment (e.g. airports), you are encouraged to ask for authorization to use this product prior to turning on the product.

Information to the user

We are not responsible for any radio or television interference caused by unauthorized modification of this product. The correction of interference caused by such unauthorized modification will be the responsibility of the user. We and our authorized resellers or distributors are not liable for damage or violation of government regulations that may arise from failing to comply with these guidelines.

Disposal of Old Equipment and Batteries

Only for European Union and countries with recycling systems

These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Additional safety precautions

Posted facilities

- Turn off the product when in hospitals, health care facilities, or any facility where posted notices require you to do so. Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

- Medical device manufacturers recommend a minimum separation of 15 cm between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.
- Persons with pacemakers:
 - Should ALWAYS keep this product more than 15 cm from their pacemaker when this product is turned ON;
 - Should use the ear opposite the pacemaker to minimize the potential for interference;
 - Should not carry this product in a breast pocket;
 - Should turn off the product immediately if there is any reason to suspect that interference is taking place.

Hearing aids

- Some digital wireless products may interfere with some hearing aids. In the event of such interference, consult the manufacturer of your hearing aid to discuss alternatives.

Other medical devices

- If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Aircraft

- Turn off the product after boarding an aircraft, when instructed by flight staff. Obey instructions from flight staff regarding the use of the product in flight. Using this product in an aircraft may be hazardous to the aircraft's operation and disrupt wireless communication, and may also be illegal.

Potentially explosive atmosphere

- Turn off the product in areas where a potentially explosive atmosphere exists and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in injury or even death.

- Areas with potentially explosive atmosphere may include fueling areas, chemical plants, below deck on boats, fuel or chemical transfer or storage facilities, vehicles using petroleum or natural gas, or areas where the atmosphere contains particles such as grain, dust, or metallic powders, and any other area where you would normally be advised to turn off your vehicle engine.

Electronic devices

- This product receives and transmits radio frequency signals while switched on. Most electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from this product. Therefore, the use must be restricted in certain situations to avoid interference.

Driving

- Give full attention to driving. Driving safely is your first responsibility.
- Pull off the road and park before placing or answering a call. It is unsafe to operate the product while driving.
- Check the laws and regulations in the areas where you drive, and always obey them.
- Only qualified personnel should install the product in a vehicle. Check regularly that the product is securely mounted in your vehicle and operating properly.
- Do not place or install the product in the area over the air bag or in the air bag deployment area. If the air bag inflates, serious injury and/or damage could result.
- RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Consult the manufacturer (or its representative) of the vehicle and any equipment that has been added to the vehicle regarding the use of mobile products.
- Use hands-free operation, if available and legally permitted.

Emergency communications

- Never rely solely on a mobile product for essential or emergency communications. Network connections can be affected by

remaining battery level, radio signals, service networks, and other conditions, and as a result, emergency communications cannot be guaranteed in all conditions.

Antenna

- Do not replace the antenna. Unauthorized antennas, modifications, or attachments could damage the product.
- Do not touch or cover the antenna area while the product is on. Call quality, power levels, and the overall performance of the product may be affected.

Volume

- Do not turn the volume up too loud when using headphones and earphones.



- Exposure to excessive sound pressure levels for extended periods may cause hearing damage.
- Being unable to hear sounds in your environment may lead to accidents.

AC adaptor

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

Laser device caution

(for models with an optional barcode reader)

CAUTION!

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.


This product is using lasers that comply with IEC60825-1:2007 regulations.

This product utilizes a “Class 2” laser.

Class 2 laser readers use a low power, visible diode. As with any very bright light source, such as the sun, the user should avoid staring directly into the light beam. Momentary exposure to a Class 2 laser is not known to be harmful.

Caution: Procedures other than those specified herein may result in hazardous radiation exposure.

Labeling and device location

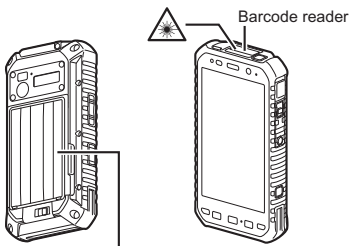

LASER RADIATION

DO NOT STARE INTO BEAM
CLASS 2 LASER PRODUCT

1 mW MAX 630-680 nm
IEC60825-1:2007

Intended use

- This product is not intended for use as, or as part of, nuclear equipment/systems, air traffic control equipment/systems, aircraft cockpit equipment/systems*¹, medical devices or accessories*², life-support systems or other equipment/devices/systems that are involved with ensuring human life or safety. Panasonic will not be responsible for any liability resulting from the use of this product arising out of the foregoing uses.
 - *1 Aircraft cockpit equipment/systems include Class 2 Electrical Flight Bag (EFB) Systems and Class 1 EFB Systems when used during critical phases of flight (e.g., during take-off and landing) and/or mounted on to the aircraft. Class 1 EFB Systems and 2 EFB Systems are defined by FAA: AC (Advisory Circular) 120-76A or JAA: JAA TGL (Temporary Guidance Leaflets) No.36.
 - *2 As defined by the European Medical Device Directive (MDD) 93/42/EEC.
- Panasonic cannot guarantee any specifications, technologies, reliability, safety (e.g., Flammability/Smoke/Toxicity/Radio Frequency Emission, etc.) requirements related to aviation standards and medical equipment standards that differ from the specifications of our COTS (Commercial-Off-The-Shelf) products.
- This product is not intended for use in medical equipment including life-support systems, air traffic control systems, or other equipment, devices or systems that are involved with ensuring human life or safety. Panasonic cannot be held responsible in any way for any damages or loss resulting from the use of this unit in these types of equipment, devices or systems, etc. This product has been designed so as to minimize shock to the LCD, the leakage of liquid (e.g., water) on to the buttons, etc., but no warranty is provided against such trouble. Therefore, as a precision instrument, be extremely careful in the handling of the product.

General information

- For body-worn operation, this product has been tested when used with a Panasonic accessory designated for this product and when used with an accessory that contains no metal and that positions front or back of this product a minimum of 10 mm from the body.

Caution

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

Explanation of graphical symbols on nameplate

～ : Alternating current

— : Direct current

For Europe models

SAR (Specific Absorption Rates)

This product is a radio transmitter and receiver. When it is on, it receives and transmits RF energy. When you are on a phone call, the system handling your call controls the power level at which the product transmits. This product is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this product when tested at the ear is 0.493 W/kg (for models supporting cellular transmission) and 0.0371 W/kg (for models supporting Wi-Fi transmission only).^{*1}

For body-worn operation, this product has been tested and meets RF exposure guidelines when used with a Panasonic accessory designated for this product and when used with an accessory that contains no metal and that positions the mobile device a minimum of 5 mm from the body.

In this case, the highest tested SAR value is 1.282 W/kg (for models supporting cellular transmission) and 0.172 W/kg (for models supporting Wi-Fi transmission only). Use of other accessories may not ensure compliance with RF exposure guidelines. As SAR is measured utilizing the product's highest transmitting power the actual SAR of this product while operating is typically below that indicated above. This is due to automatic changes to the power level of the product to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile device away from the head and body.

*1 The tests are carried out in accordance with international guidelines for testing.

Wi-Fi use

Operation of the device in the 5 GHz frequency band is restricted to indoor use only in the following countries.

AT BE BG CH CY CZ DE DK EE EL ES
FI FR HR HU IE IS IT LI LT LU LV MT
NL NO PL PT RO SE SI SK TR UK

Declaration of Conformity (DoC)

Hereby, Panasonic declares that the radio equipment type FZ-E1 (Model No. FZ-E1BF, FZ-E1DF, FZ-E1BFCB and FZ-E1DFCB) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.ptc.panasonic.eu>

Contact to Authorised Representative:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

Maximum radio-frequency power transmitted in the frequency bands

	Frequency band	Maximum transmit power
Wi-Fi 2.4 GHz	TX/RX 2412 MHz - 2472 MHz	16.90 dBm (e.i.r.p.)
Wi-Fi 5 GHz	TX/RX 5180 MHz - 5700 MHz	17.99 dBm (e.i.r.p.)
Bluetooth	TX/RX 2402 MHz - 2480 MHz	8.40 dBm (e.i.r.p.)
NFC	TX/RX 13.56 MHz	-13.34 dBuA/m at 10 m
GNSS	RX L1 1575.42 MHz (GPS), 1598.0625 MHz - 1605.375 MHz (GLONASS)	-
GSM	TX 880.2 MHz - 914.8 MHz, RX 925.2 MHz - 959.8 MHz	32.5 dBm (Power class 4)
DCS	TX 1710.2 MHz - 1784.8 MHz, RX 1805.2 MHz - 1879.8 MHz	29.5 dBm (Power class 1)
WCDMA FDD I	TX 1922.4 MHz - 1977.6 MHz, RX 2112.4 MHz - 2167.6 MHz	23 dBm (Power class 3)
WCDMA FDD VIII	TX 882.4 MHz - 912.6 MHz, RX 927.4 MHz - 957.6 MHz	23 dBm (Power class 3)
LTE Band 3	TX 1710.7 MHz - 1784.3 MHz, RX 1805.7 MHz - 1879.3 MHz	23 dBm (Power class 3)
LTE Band 7	TX 2502.5 MHz - 2567.5 MHz, RX 2622.5 MHz - 2687.5 MHz	23 dBm (Power class 3)
LTE Band 20	TX 834.5 MHz - 859.5 MHz, RX 793.5 MHz - 818.5 MHz	23 dBm (Power class 3)

Interface Cable

- Use of an interface cable longer than 3 m is not recommended.

Ecodesign information

Ecodesign information under EU Regulation (EC) No.1275/2008 amended by (EU) Regulation No.801/2013. From 1 January 2015.

please visit here: www.ptc.panasonic.eu

click [Downloads] → Energy related products information (Public)

Power consumption in networked standby and guidance are mentioned in the web site above.



For UK

For your safety, please read the following text carefully.

This appliance is supplied with a molded three pin mains plug for your safety and convenience.

A 3 ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 3 ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local dealer.

If the fitted molded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safely.


There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

How to replace the fuse

The location of the fuse differs according to the type of AC mains plug (figures A and B).

Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

Open the fuse cover with a screwdriver and replace the fuse and close or attach the fuse cover.

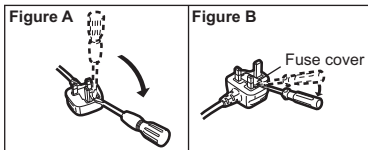

For Turkey / Türkiye için.

AEEE complies with Directive of Turkey.

AEEE Yönetmeliğine Uygundur.

Handling cautions

General use

- Use only specified accessories.
- This product has been tested to meet strict MIL-STD-810G standards (for vibration and shock), however, as with any portable devices, precautions should be taken to avoid any damage.
- To prevent liquids, sand, dust, or any foreign objects from entering the product, always keep the covers clean and make sure to firmly close them after opening. Take care not to get anything caught between the covers and product.
- The unit will become warm during use or while charging. This is not a malfunction.

While taking usage conditions and safety into consideration, if the unit becomes hot, the unit may stop certain functions or restart.

This is not a malfunction.

- If the product's operating system is upgraded, product functions and operating procedures may change and certain apps may not function any longer.
- It is illegal in many areas to record a call without permission. Always ask the other party for permission before recording a call.
- (For the model with the hand strap only)
The hand strap may appear in images when using the hand strap while shooting with the camera. When shooting with the camera, adjust the position of the hand strap so that the hand strap does not enter the shooting range of the camera.

Battery

- The battery is a consumable item, and battery life varies with usage conditions. Typical battery life is approximately one year or about 500 charge cycles. As the battery reaches the end of its life, the amount of time it can be used becomes dramatically shorter and repeated charging does not restore its performance. When this occurs, the battery should be replaced with a new one. Contact your technical support representative.

- The battery may become warm during charging and during normal use. This is normal.
- Charge the battery in environments with an ambient temperature of 10 °C to 35 °C.
- Battery charging will not start if the internal temperature of the battery is below 0 °C or above 50 °C.
- The product prevents overcharging of the battery by charging only when the remaining battery power is less than approximately 95 % of its full capacity.
- If the product will not be used for an extended period (i.e., a month or more), charge or discharge (use) the battery until the remaining battery level becomes 30 % to 40 % and then store the product in a cool, dry place.
- Store the battery in environments with an ambient temperature of -20 °C to 35 °C. If the battery is stored in other environments, battery performance and battery life may be reduced.
- If battery charging is not completed after the specified charging time has passed, remove the battery from the unit. The battery protection device may be damaged.
- Do not touch the terminals of the battery. Failure to observe this may cause poor contact.
- If the terminals of the battery become clogged with foreign matter, it may be difficult to remove the foreign matter and may result in damage to the unit.
- When storing or transporting the battery, make sure that the battery's terminals do not become dirty and that no foreign objects or debris become attached to the battery's terminals.
- Dispose properly in compliance with local waste regulations.

Maintenance

- If the product becomes wet or dirty, wipe the affected areas with a soft cloth, then shake out the liquid from the product. Liquid that remains on the surface of the screen may cause staining.
- Do not dry the product with an appliance or heat source such as a microwave oven or dryer.
- For typical cleaning, wipe the product with a soft, dry cloth, such as gauze. An alcohol-based disinfectant may be used if necessary.

You may also dip a soft cloth in water-diluted detergent and wring it thoroughly before wiping the product.

- Do not apply water or detergent directly to the product. Liquid may enter the product and cause malfunction or damage.
- Do not clean the product with agents that contain ester, strong alkaline, benzene, or thinner as they may harm the surface of the product and cause discoloration, etc. Do not use commercially-available household cleaners and cosmetics, as they may contain components that harm the surface of the product.

Extreme environments

- The product's internal heater, if enabled (page 54), will activate in order to warm the product when its temperature is -12 °C or colder.

Protecting your data

- To prevent accidental loss of data, we recommend that you keep a separate record of any important data that you store in the product, SIM card, and SD card.
- To prevent the unintended disclosure of private information, always confirm the destination before sending messages, file attachments, or any other communications, such as email.
- Before disposing of the product or handing the product over to a third party, remove the SIM card, SD card, and any other accessories.
- Before disposing of the product or handing the product over to a third party, perform a factory data reset (page 55) to erase any data stored in the product.
- Before using Wi-Fi or Bluetooth features, take appropriate action to secure your data.

Trademark and license information

Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Panasonic Corporation is under license.
- microSDXC Logo is a trademark of SD-3C, LLC.
- The N-Mark logo is a trademark or registered trademark of NFC Forum.
- Wi-Fi, the Wi-Fi logo, the Wi-Fi CERTIFIED logo and Wi-Fi CERTIFIED are trademarks or registered trademarks of Wi-Fi Alliance.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.



License information

- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or (ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video.
No license is granted or shall be implied for any other use.
Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.
- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such

technology outside of this products is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Terms and illustrations in this document

- Panasonic Corporation and/or its affiliates are referred to collectively as “we” or “Panasonic”.
- This product supports microSD, microSDHC, and microSDXC memory cards. In this document, the term “SD card” is used as a generic term for any supported memory card.
- This product supports micro SIM cards (certain models only). In this document, the term “SIM card” is used as a generic term for any supported SIM card.
- Some illustrations in this document are simplified to help your understanding and may look different from the actual product.
- Information in this document is subject to change without notice.
- For the latest information about optional products, refer to the product catalogs, etc.

Disclaimers


Panasonic shall not be liable for loss of data or other incidental or consequential damages resulting from the use of this product. This product can download, store, forward, and receive additional content, such as applications, ringtones, contact information, and media files. The use of such content may be restricted or prohibited by the rights of third parties, including but not limited to restriction under applicable copyright laws. You are entirely responsible for additional content that you download to or forward from this product; Panasonic is not responsible for such content or its use. Before using such content, it is your responsibility to verify that your intended use is properly licensed or is otherwise authorized. Panasonic does not warrant or guarantee the accuracy, integrity or quality of any additional content or any other third-party content. Under no circumstances will Panasonic be liable in any way for the improper use of additional content or other third-party content by this product or its operator. This document and any related product documentation may refer to services and applications that are provided by third parties. The use of such services or programs may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party web site, please review the web sites' terms of use and applicable privacy policy in advance. Panasonic does not warrant or guarantee the availability or performance of any third-party web sites, services, or applications.

Getting Started

Confirming the included items

The following items are included. If any items are missing, please contact your technical support representative.

- **Main unit** ×1
 - **Battery** ×1
 - **Battery cover** ×1
- (Certain models only)**
- **AC adaptor** (Model number CF-AA6373A) ×1

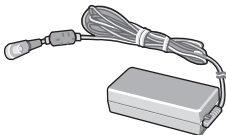


- **AC cord** ×1



Description of parts

Front view

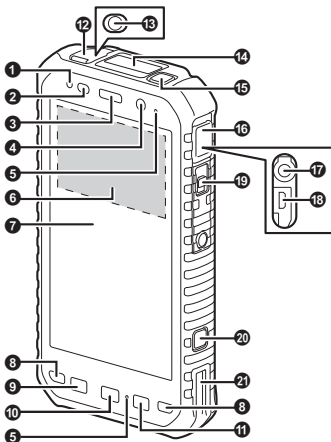

1 Indicator

Orange, lit: Battery is charging

Green, lit: Battery charging is complete

Red, lit: Battery level is 10 % or less of a full charge

2 Ambient light sensor, proximity sensor

The ambient light sensor automatically adjusts the screen brightness. The proximity sensor prevents accidental operations on the touch panel during phone calls.

3 Earpiece

4 Front camera

5 Microphone

6 NFC antenna (internal)

When using an NFC card or other NFC device, touch the card/device to this area of the unit.

7 Display

Can also be operated while using gloves (glove touch mode).

8 Speaker

9 Back button

Press to return to the previous screen.

10 Start button

Press to display the Start screen.

11 Search button^{*1}

Press to search the web.

12 Headset jack cover (page 35)

13 Headset jack

14 Barcode reader (certain models only)

15 Power button (page 44)

16 Interface cover (page 36)

17 DC input jack (page 42)

18 micro USB port (page 42)

19 Interface cover lock switch

20 Camera button

Press and hold to launch the camera app. You can take a picture or record a video.


21 Cradle rail

Used when connecting the unit to an optional cradle.

^{*1} The registered function can be changed. See the Reference Manual.

Rear view

The battery cover and battery are omitted in this illustration.

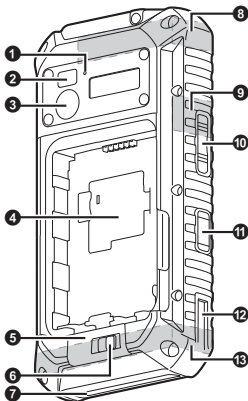

1 Microphone

2 Flash

Can be used when taking pictures. Also lights if you open the battery cover while the unit is turned on.

3 Rear camera

4 Card access cover

5 Cover latch

6 Cover latch lock switch

7 Expansion bus connector

Used when connecting an optional cradle or other future expansion options.

8 GPS antenna (internal)

9 Wi-Fi, Bluetooth antenna (internal)

10 Volume buttons

11 Side button ^{*1}

Used when using the barcode reader (certain models only).

12 Cradle rail

Used when connecting the unit to an optional cradle.

13 Cellular antenna (internal)

^{*1} The registered function can be changed. See the Reference Manual.

Opening and closing the headset jack cover


Pull the top edge of the cover (i.e., the edge closest to the front of the unit) to open the cover. When closing, make sure the cover is closed firmly.


IMPORTANT


- Observe the following to ensure the waterproof and dustproof performance of the unit.
 - Make sure the headset jack cover is securely closed when the headset jack is not being used.
 - When closing the headset jack cover, make sure there is no debris lodged in and around the cover.

Opening and closing the interface cover

Opening the interface cover




1. Unlock the cover by sliding the switch away from .





2. Open the cover by pulling the top edge of the cover (i.e., the edge closest to the top of the unit) away from the unit.

Closing the interface cover



1. Close the cover firmly.






2. Lock the cover by sliding the switch toward . If the red area inside the switch is visible, the cover is not properly locked.

IMPORTANT


- Observe the following to ensure the waterproof and dustproof performance of the unit.
 - Make sure the interface cover is securely closed and locked when the DC input jack and micro USB port are not being used.
 - When closing the interface cover, make sure there is no debris lodged in the gasket that seals the cover.

Removing the battery cover

1. Unlock the cover latch by sliding the switch (circled in the illustration) away from  (①), and then open the cover latch by sliding it toward  (②).




2. While holding the bottom corners of the battery cover (circled in the illustration), lift the battery cover (①) and then remove the cover (②).

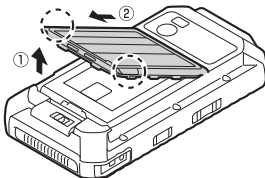


Attaching the battery cover

1. Insert the tabs on the battery cover into the corresponding slots in the battery chamber (①), and then lower the battery cover into place (②).
 - The edge of the battery cover with two tabs (circled in the illustration) should face the bottom of the unit.

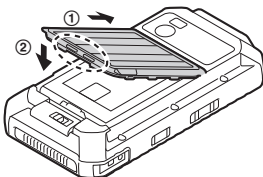


2. Press down firmly on the outside edges of the battery cover to seal it closed.
 - Start in the middle of the cover and work your way down to the bottom, pressing in the areas shown.

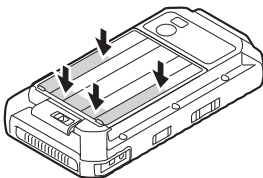


3. Make sure that the battery cover is properly sealed.
 - Two red lines are painted on the inside edges of the battery cover. If the red lines (circled in the illustration) are visible from the side of the unit after the battery cover is closed, the cover is not properly sealed.


Example: left side of unit





Properly sealed



Not properly sealed

4. Close the cover latch (①) and lock it (②) by sliding the switch (circled in the illustration) toward .




- If the red area above the latch or inside the switch is visible, the latch is not properly closed or locked.

IMPORTANT


- Observe the following to ensure the waterproof and dustproof performance of the unit.
 - Always make sure the battery cover is securely closed and locked.
 - When closing the battery cover, make sure there is no debris lodged in the gasket that seals the cover.

Installing a SIM card (certain models only)

1. Remove the battery cover (page 37) and battery if necessary.
 - To remove the battery, lift the battery by pulling on the yellow tab and then remove the battery.
2. Open the card access cover.

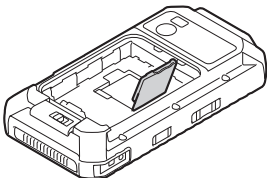


3. Insert the SIM card into the micro SIM card slot.
 - Install only micro SIM cards. Do not attempt to install full-size SIM cards.
 - Do not use the micro SIM card adapter.
 - Hold the SIM card so that the terminal surface is facing down, with the notch in the position circled here.

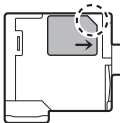

- Do not insert the micro SIM card anywhere except MicroSIM Slot 1.
4. Push the SIM card fully into the slot until you hear a click.
 - When removing a SIM card, push it slightly into the unit to eject it.

Installing an SD card


1. Remove the battery cover (page 37) and battery if necessary.
 - To remove the battery, lift the battery by pulling on the yellow tab and then remove the battery.
2. Open the card access cover.
3. Insert the SD card into the SD card slot.
 - Install only microSD cards. Do not attempt to install SD cards of other sizes.
 - Hold the SD card so that the terminal surface is facing down, with the notch in the position circled here.



4. Push the SD card fully into the slot until you hear a click.
 - When removing an SD card, push it slightly into the unit to eject it.

Installing the battery

1. Remove the battery cover (page 37) if necessary.
2. Insert the terminal end of the battery into the battery chamber.
 - Insert the battery so that the battery label and the yellow tab are facing up, and that the terminals on the battery line up with the terminals inside the battery chamber.

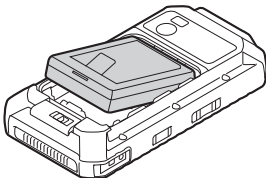

3. Lower the battery into the battery chamber.
 - To remove the battery, lift the battery by pulling on the yellow tab and then remove the battery.


Charging the battery

You can charge the unit by connecting it to a power outlet using an AC adaptor (page 61), and also by connecting it to the USB port of a computer or other device using a USB cable.



The indicator lights in orange while the battery is charging, and lights in green when charging is complete.

Connect the AC adaptor and power cord as shown in the illustration below.




Note

- When connecting a USB cable, note the shape of the micro USB plug and the micro USB port. Do not attempt to connect the USB cable upside down.
- Remove any dust or water droplets from plugs before connecting them. Do not use excessive force when inserting plugs or insert them at an angle.
- If the installed battery fails the unit's battery authentication test, the battery cannot be charged.
- The battery cannot be charged while the unit is turned off. If the unit is off and you begin charging, the unit will start.

Confirming the battery level


The battery level is displayed in the upper-right corner of the screen, in the status bar.



You can also confirm the specific amount of battery level remaining. Flick the Start screen to the left, and then in the All apps list, tap **[Settings] → [System] → [Battery]**.

Turning the unit on and off


Turning the unit on

Press and hold  (power button) on the top of the unit until the unit briefly vibrates.




Note

- We recommend that you fully charge the battery before turning on the unit for the first time or after an extended period of storage.
- If the unit's temperature is -12 °C or less when you try to turn the unit on, the indicator flashes in green and orange and the unit will not turn on. When the unit warms up, the indicator will stop flashing and the unit will turn on automatically.

Turning the unit off

1. Press and hold  until **[slide down to power off]** is displayed.
2. Tap the screen and slide your finger down.

Turning the screen on and off

- To turn the screen off
Press .
- To turn the screen on
 1. Press . By default, you may also press  (start button) to turn on the screen.
 - The lock screen is displayed.
 2. Flick the lock screen upwards.


Configuring the unit for the first time


The first time you turn the unit on, you will be prompted to configure different settings. Follow the on-screen instructions and configure each item as needed. An Internet connection is required to configure certain items.

- If you do not want to add the provisioning package when you are prompted, press **[Cancel]** and proceed to the next settings screen.


Screen display

Using the Start screen and the All apps list

The Start screen is the starting point for all operations. The Start screen already has a number of tiles displayed on it, but the tiles displayed and their locations can be changed as necessary. Press  (start button) to return to the Start screen at any time. Flick the Start screen to the left to switch to the All apps list, where all of the applications on the device are displayed in a list.

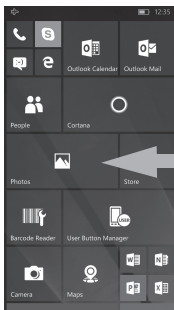

Start screen

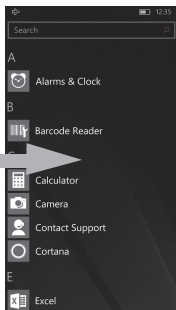


All apps list

- Tap any letter on the All apps list to jump to a specific section of the list.

Using the status bar

The status icons displayed on the status bar at the top of the screen indicate the current status of the device.


- See the Reference Manual for an explanation of the icons.



Using the action center

Detailed information about incoming calls, text messages, and app update information is displayed in the action center. The action center is displayed by flicking downward from the top of the screen and is hidden by flicking up from the bottom of the screen.


While the action center is displayed, you can tap a notification to take action or change the on/off settings for displayed apps. Tap **[All settings]** to switch to the **[Settings]** app.

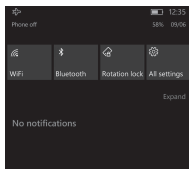

Basic operations

Adjusting the volume

1. Press [+] or [-] of the Volume button.
 - The volume bar for phone calls and notifications is displayed at the top of the screen. (It disappears after several seconds.)




2. Press [+] or [-] to set the volume at an appropriate level.
 - The volume level is displayed on the right side of the volume bar.

Using the volume adjustment panel

Tap the [v] on the right edge of the volume bar to display the volume adjustment panel. (It will disappear after several seconds.) While the volume adjustment panel is displayed, you can also adjust the volume for media and apps or turn the vibration on or off.


Using the app bar

Depending on the application, the app bar is displayed at the bottom of the display during operation and you can tap the icons to perform operations. Tap ●●● on the right side of the screen to display explanations for each icon, the operation menu, and so on.





Using the context menu

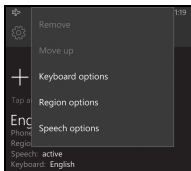Some items have context menus. The context menu is similar to the right click menu on a computer. Context menus can be opened by tapping and holding an item. To close the menu, tap any place outside of the menu.



Displaying the App switcher

When multiple apps are active, press and hold  (back button) to display the App switcher. Flick between the screens and tap one to switch to that screen, or flick the screen downwards to force quit the app.

To close the App switcher, press  (back button).


Troubleshooting

If you experience any trouble while using the unit, refer to the information in this section for troubleshooting. See the Reference Manual (flick the Start screen to the left, and then tap **[Online Manual]** in the All apps list) for additional troubleshooting information.

If the problem persists, contact your technical support representative.

Starting up



The unit does not turn on.

- To turn the unit on, press and hold  (power button) until the unit briefly vibrates.
- The battery may have become completely discharged. Charge the battery.
- The unit may be too hot. Leave the unit in an environment of 10 °C to 35 °C for about an hour, and then try again.
- The unit may be too cold. Leave the unit in an environment of 10 °C to 35 °C for about an hour, and then try again. After turning on the unit, you can enable the heater so that it will turn on automatically if the unit becomes too cold. See “Enabling the internal heater” (page 54).

The unit does not wake up from sleep.

- The battery may have become completely discharged while the unit was in sleep mode. In this case, any data which has not been saved will be lost, and the unit will not wake up. Charge the battery.
- The unit may be too hot. Leave the unit in an environment of 10 °C to 35 °C for about an hour, and then try again.
- The unit may be too cold. Leave the unit in an environment of 10 °C to 35 °C for about an hour, and then try again. After turning on the unit, you can enable the heater so that it will turn on automatically if the unit becomes too cold. See “Enabling the internal heater” (page 54).


Nothing appears on the screen.

- The screen may have turned off to save power. Press  (power button). By default, you may also press  (start button) to turn on the screen.
- Charge the battery.
- Install the battery correctly.
- Replace the battery with a fully-charged one.
- The screen is too dark. See “The screen is too dark.” (page 51).

Other startup problems

- Disconnect and remove all peripheral devices.

Shutting down**The unit does not turn off.**

- It may take one or two minutes for the unit to turn off. This is not a malfunction.
- Press and hold  (power button) and [-] of the Volume button for at least 10 seconds to restart the unit, and then try again.
- Disconnect and remove all peripheral devices.

Screen**There are red, green, or blue dots on the screen, or there is unevenness in screen colors or brightness.**

- The following are not malfunctions.
 - Although advanced high-precision technologies are used in the production of color LCD screens, a very small number of the screen pixels may be dark or remain constantly lit.
 - Due to the natural characteristics of LCD screens, you may notice unevenness in colors and brightness depending on your angle of view. Hues may also vary by unit.

The screen is too dark.

- The **[Change brightness automatically when lighting changes]** setting was turned on. Manually adjust the screen brightness.
 1. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[System]** → **[Display]**.
 2. Tap the **[Change brightness automatically when lighting changes]** switch to turn it off.
 3. Adjust the **[Adjust brightness level]** slider.
- The **[Minimum limit brightness]** setting of customized silent mode was turned on. Turn the setting off.
 1. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[Extras]** → **[Customized silent mode]**.
 2. Tap the **[Customized silent mode]** switch to turn it off, then tap the **[Minimum limit brightness]** checkbox to turn it off.
 3. Tap the **[Customized silent mode]** switch to turn it on.

Indicator

The indicator flashes in green and orange.

- The battery cannot be charged temporarily because the ambient temperature is too low or too high. Leave the unit in an environment of 10 °C to 35 °C for about an hour.
- The unit cannot turn on because the unit's temperature is -12 °C or less. While the indicator flashes in green and orange, the heater will try to heat the unit if it is enabled. Once the unit warms up, the indicator will stop flashing and the unit will turn on automatically.

The indicator lights in red.

- The remaining battery level is approximately 10 % or less of a full charge. Charge the battery.

The indicator flashes in red.

- Battery authentication failed. Use a battery specified on page 61.
- There may be debris lodged in the battery charge terminals. Remove the battery and remove any debris found.

The indicator does not light during charging.

Battery charging ends quickly, or the battery cannot be charged at all.

- The AC adaptor cable or USB cable is not connected properly. Confirm all connections, remove the AC adaptor cable or USB cable, and then insert it again. Make sure the AC adaptor plug or micro USB plug is inserted fully into the unit.
- There may be debris lodged in the battery charge terminals. Remove the battery and remove any debris found.
- Replace the battery with a new one.

Other


The date and time are incorrect.

- Confirm the date and time settings. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[Time & language]** → **[Date & time]**.
- Set the date and time automatically.
 1. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[Time & language]** → **[Date & time]**.
 2. Tap the **[Set date and time automatically]** and **[Set time zone automatically]** switches to turn them on.
 3. Make sure the unit is in an area with good wireless reception, turn the unit off, and then turn it on again.


The unit's operation is slow.

- Ambient temperature may be too low or too high. Leave the unit in an environment of 10 °C to 35 °C for about an hour and then try again.

The unit does not respond.

- Turn the unit off and then on again (page 44).
- If an app does not work normally, follow the instructions below to force quitting the problematic app.
 1. Press and hold  (back button) to display the App switcher, and then flick between the screens to select the desired app.
 2. Flick the desired app downwards to force quit.

The screen freezes and no operations can be performed.

- Press and hold  (power button) and [-] of the Volume button for at least 10 seconds to restart the unit, and then try again.

Appendix

Replacing the battery

Place the unit on a flat, stable surface such as a table when replacing the battery.

1. Turn off the unit (page 44).
2. Remove the battery cover (page 37).
3. Lift the battery by pulling on the yellow tab, and then remove the battery.
4. Install the replacement battery (page 42).
5. Attach the battery cover (page 38).

Hot swapping the battery

The unit supports “hot swap” battery replacement, which allows you to replace the unit’s battery without turning the unit off.

- Be sure to finish the battery replacement in 30 seconds. Otherwise, the unit may turn off. In this case, any data which has not been saved will be lost.

Enabling the internal heater

If enabled, the unit’s internal heater will activate in order to warm the product when its temperature is -12 °C or colder.

1. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[Extras]** → **[Other settings]**.
2. Set the **[Heater]** switch to **[Auto]** or **[Off]**.

Factory data reset

CAUTION

- The following procedure resets all settings and erases any data you have stored in the unit. Back up important data before performing this procedure.
- 1. Flick the Start screen to the left, and then in the All apps list, tap **[Settings]** → **[System]** → **[About]**.
- 2. Tap **[Reset your phone]** → **[Yes]** → **[Yes]** and follow the on-screen instructions.
 - The unit restarts when the factory data reset is complete.

Specifications

Typical unit specifications and certain options are described below.
Unit configuration may vary.

Model No.	FZ-E1
CPU	Qualcomm® MSM8974AB 2.3 GHz quad-core CPU
Memory	2 GB ^{*1}
Storage	32 GB
Display	Internal LCD 5-inch, 1280×720 pixels (HD), 16:9 aspect ratio, 16,777,216 colors
Wi-Fi	IEEE802.11 a/b/g/n/ac Qualcomm® WCN3680 Data transfer rate IEEE 802.11a: up to 54 Mbps IEEE 802.11b: up to 11 Mbps IEEE 802.11g: up to 54 Mbps IEEE 802.11n: • HT20: up to 72.2 Mbps • HT40: up to 150 Mbps IEEE 802.11ac: • VHT20: up to 86.6 Mbps • VHT40: up to 200 Mbps • VHT80: up to 433 Mbps Standards supported IEEE 802.11a / IEEE 802.11b / IEEE 802.11g / IEEE 802.11n / IEEE 802.11ac

Wi-Fi	Transmission method OFDM system, DSSS system Wireless channels used IEEE 802.11a / IEEE 802.11n (5 GHz) / IEEE 802.11ac <ul style="list-style-type: none"> • W52 (36, 38, 40, 42, 44, 46, 48 ch) • W53 (52, 54, 56, 58, 60, 62, 64 ch) • W56 (100, 102, 104, 106, 108, 110, 112, 116, 118, 120, 122, 124, 126, 128, 132, 134, 136, 140 ch) IEEE 802.11b / IEEE 802.11g / IEEE 802.11n (2.4 GHz): 1 ch - 13 ch RF frequency band 2.4 GHz Band: 2412 MHz - 2472 MHz 5 GHz Band: 5180 MHz - 5320 MHz, 5500 MHz - 5700 MHz
Bluetooth	Version 4.1, Class 1 Transmission method FHSS system Wireless channels used 1 - 79 ch (Low energy: 0 - 39 ch) RF frequency band 2400-2483.5 MHz (including guard bands)
Mobile networking (certain models only)	LTE, HSPA+, UMTS, EDGE, GPRS, GSM SIM card slot micro SIM card slot ×1
Sound	Speaker Loud volume speaker (mono) ×2 Microphone Internal microphone ×3
Security technology	ARM® TrustZone® (built-in)

Camera	Front 1.3 megapixels Video: 1280×720 pixels, 30 fps Still: 1280×960 pixels Rear 8 megapixels Video: 1280×720 pixels, 30 fps Still: 3264×2448 pixels
GPS	GPS 2 m CEP50 (±2 m to 4 m), GLONASS
Barcode reader (certain models only)	1D, 2D compatible
Enhanced data security	FIPS 140-2 level-1 compliant
Sensors	Ambient light sensor, digital compass, gyro sensor, acceleration sensor, proximity sensor
NFC	Type A, B, FeliCa compatible
Card slots	SD memory card micro SDXC card slot ×1 ^{*2}
Interfaces	USB 2.0 port ×1 ^{*3} , gadget interface, headset ×1, cradle interface ×1
Touchscreen	10-point capacitive touchscreen with glove touch mode and rain sensing touch mode ^{*4}
Power supply	Battery
AC adaptor	CF-AA6373A (60 W) ^{*5}

Battery	Li-ion 3.8 V, 6200 mAh Operating time (approx.)* ⁶ Standby: 1000 hours Talk: 23 hours* ⁷ Barcode scanning* ⁸ : 20.5 hours Charging time (approx.)* ⁹ 3.6 hours
Power consumption * ¹⁰	Approx. 18 W* ¹¹
Battery hot swap	Yes
Dimensions (W × D × H)	87.4 mm × 165 mm × 30.9 mm without protrusions
Weight * ¹²	Approx. 426 g* ¹³ , including battery
Operating environment * ¹⁴	Temperature -20 °C to 60 °C Humidity 30 % to 80 % RH
Storage environment	Temperature -30 °C to 70 °C Humidity 30 % to 90 % RH
Operating system * ¹⁵	Windows 10 IoT Mobile Enterprise
Water and dust resistance	IP65, IP68

Specifications are subject to change without notice.

*1 1 MB = 1,048,576 bytes, 1 GB = 1,073,741,824 bytes

*2 Operation has been tested and confirmed using the following
Panasonic brand memory cards: SD (up to 2 GB), SDHC (up to

32 GB), SDXC (up to 64 GB). Compatibility with other SD devices is not guaranteed.

- *3 Does not guarantee operation of all USB-compatible peripherals.
- *4 Single-point operation when rain sensing touch mode is enabled.
- *5 The AC adaptor is designed for use with power sources that supply up to 240 V AC.
- *6 Actual performance varies depending on usage conditions, connected peripherals, etc. Typically, operating time is reduced in colder environments.
- *7 Talk time may vary depending on the condition of the mobile network.
- *8 As defined by the JEITA Specification, Working Mode B.
- *9 Varies depending on usage conditions.
- *10 When the battery is fully charged (or not being charged) and the unit is off.
- *11 Rated power consumption.
- *12 Average weight. Actual weight may vary by unit configuration.
- *13 For models without an optional barcode reader. Weight for models with an optional barcode reader is 435 g.
- *14 Do not expose the skin to this product when using the product in a hot or cold environment.

When using the product in hot or cold environments, some peripherals may not perform properly. Confirm the recommended operation environment of the peripherals. Using the product continuously in hot environments will shorten the product life. Avoid continuous use in these types of environments.

When using the product in cold environments, the product may take longer to start up and battery operation time may be reduced.

Even when using the product within the temperature and humidity ranges listed here, using the product continuously in extreme environments will result in product deterioration and will shorten the life of the product.

- *15 Product functionality cannot be guaranteed if the operating system is modified or replaced by the user or a third party.

Accessories

Product name	Model number
AC Adaptor	CF-AA6373A
Battery Pack	FZ-VZSUX100J
Cradle	FZ-VEBX111U
4-Bay Cradle	FZ-VEBX121
4-Bay Battery Charger	FZ-VCBX111
Holster	FZ-VSTX111U

Panasonic Mobile Communications Co., Ltd.

600 Saedo-cho, Tsuzuki-ku, Yokohama-city,
Kanagawa 224-8539, Japan

Panasonic System Solutions Asia Pacific

202, Bedok South Ave 1, #01-13 Singapore 469332
<http://business.panasonic.sg/computer-product/>

Panasonic India Pvt. Ltd

12th Floor, Ambience Tower, Ambience Island, NH 8,
Gurgaon - 122002, Haryana, India

© Panasonic Mobile Communications Co., Ltd. 2017

20170240ZAD
C0617-0